



# TRICOR®

## Instruction Mainboard exchange





## **Manual-Version**

TCE\_8000\_CLASSIC\_Mainboard\_Exchange\_SM\_EN\_190215\_E006

## **SW-Version**

This manual is valid for

Main SW: Mv3.40 and higher

Display SW: Dv3.40 and higher

# Index

1.	UNSCREW THE BACK COVER.....	4
2.	UNSCREW THE 4 DISTANCE BOLTS (M7) .....	4
3.	UNPLUG THE MAIN BOARD CAREFULLY .....	5
4.	PLUG IN THE NEW MAIN BOARD .....	5




## Unscrew the back cover

### 1. Unscrew the back cover




### 2. Unscrew the 4 distance bolts (M7)

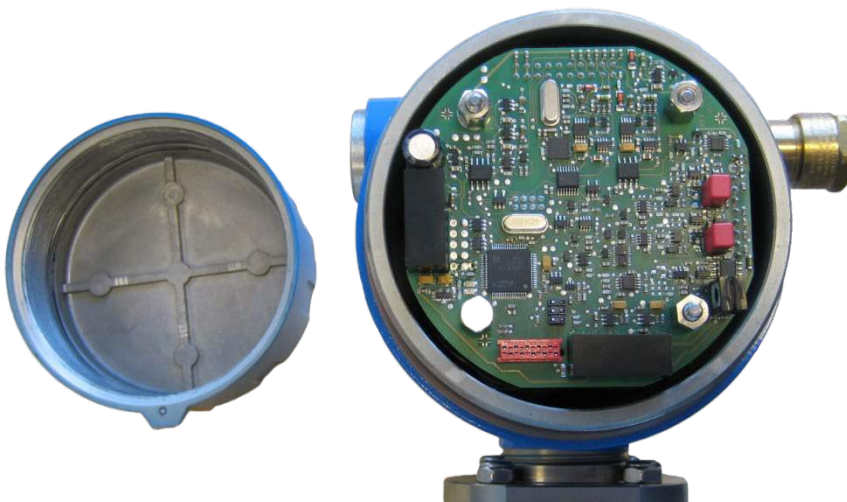




### 3. Unplug the main board carefully

(e.g. by means of a screw driver)

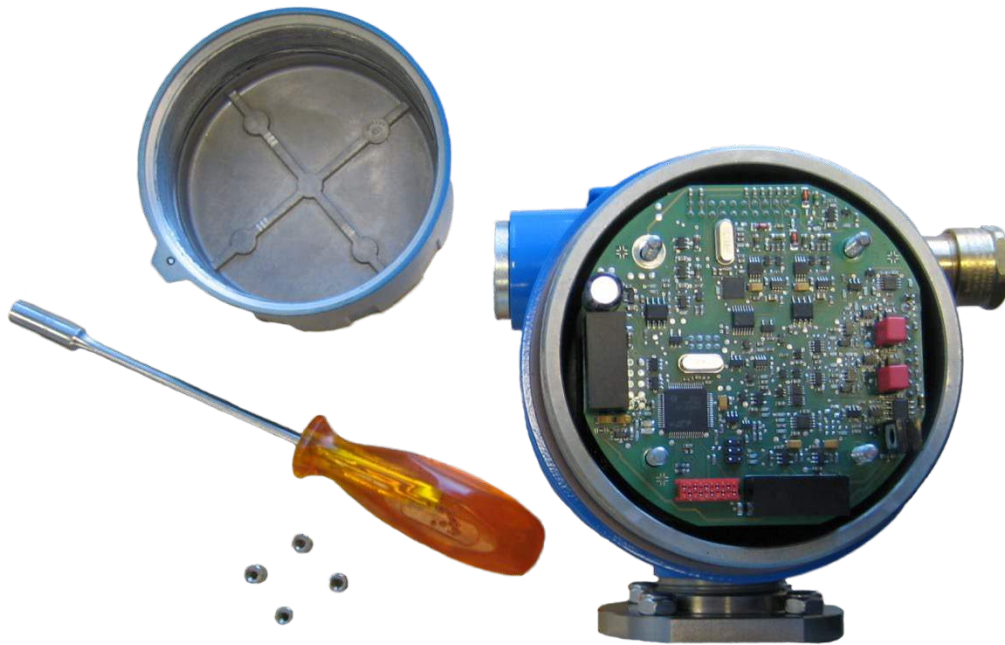

### 4. Plug in the new main board

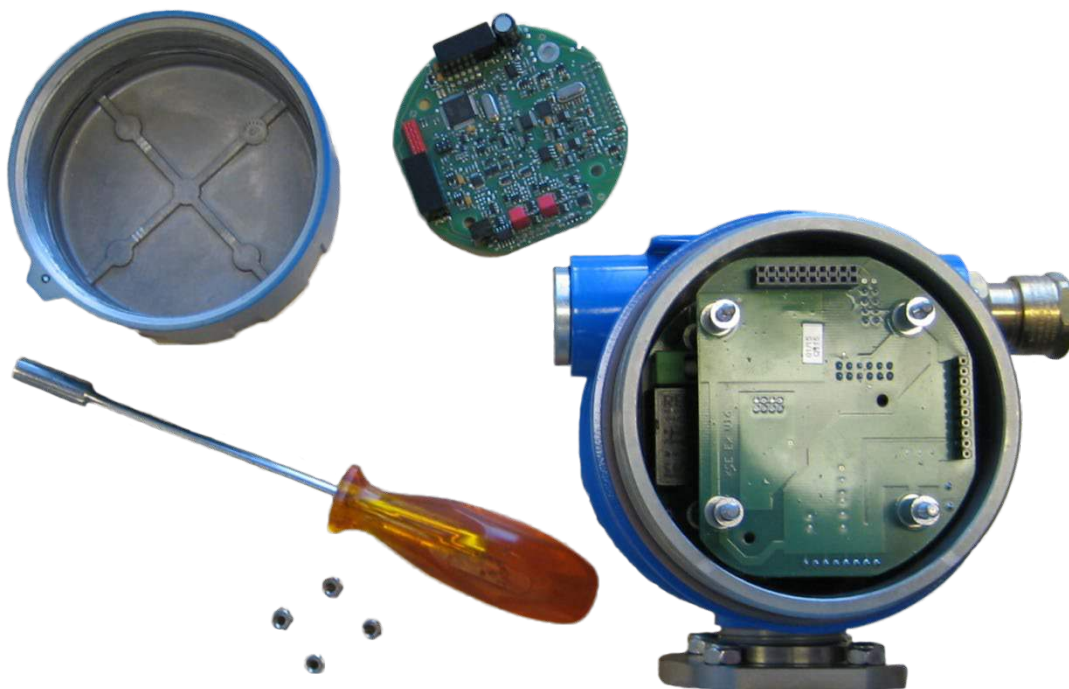



## NORTH & SOUTH AMERICA

AW Lake Company  
2440 W. Corporate Preserve Dr. #600  
Oak Creek WI 53154 | USA  
+1 414 574 4300  
[sales@aw-lake.com](mailto:sales@aw-lake.com)  
[www.aw-lake.com](http://www.aw-lake.com)

## ASIA PACIFIC & MIDDLE EAST

KEM Küppers Elektromechanik GmbH  
Liebigstraße 5  
85757 Karlsfeld | Germany  
+49 8131 59391-0  
[info@kem-kueppers.com](mailto:info@kem-kueppers.com)  
[www.kem-kueppers.com](http://www.kem-kueppers.com)

## EUROPE (ROW)

KEM Küppers Elektromechanik GmbH  
Liebigstraße 5  
85757 Karlsfeld | Germany  
+49 8131 59391-100  
[sales@kem-kueppers.com](mailto:sales@kem-kueppers.com)  
[www.kem-kueppers.com](http://www.kem-kueppers.com)

## CHINA

KEM flow technology (Beijing) Co., Ltd.  
Rm. 906, Block C, Ruipu Office Bldg, No. 15  
HongJunYingNan Road  
Chaoyang District, Beijing 100012 | China  
+86 10 84929567  
[sales@kem-kueppers.com](mailto:sales@kem-kueppers.com)  
[www.kem-kueppers.cn](http://www.kem-kueppers.cn)

