



**AW-LAKE**  
PROCESS FLOW MEASUREMENT



## ► CUTT Clamp-On Ultrasonic Transit Time Flow Meter

### Installation & Operating Manual



## **INDEX**

Connections.....	4
Keypad System .....	6
Menu System .....	7
Icons.....	8
Message Icon .....	9
Status.....	9
Password .....	11
Menu Selections.....	11
Units/Mode .....	12
Set Up .....	14
Calibration.....	18
Relay Parameters.....	20
Data Logging .....	21
Communication (Optional) .....	24
Special Functions .....	26
Typical SE16B Sensor Installation .....	30
Typical SE16A Sensor Installation .....	31
Sensor Mounting.....	35
2 or 4 Cross Installation Overview – SE16B TMK-B1 Kit.....	36
1 Cross Installation Overview – SE16B Transducers TMK-B1 Kit.....	40
2 or 4 Cross Installation Overview – SE16B Transducers TMK-B21 or TMK-B22 Kit .....	47
1 Cross Installation Overview – SE16B Transducers TMK-B21 or TMK-B22 Kit.....	51
2 or 4 Cross Installation Overview – SE16A Transducers TMK-A1 Kit.....	58
Sensor Mounting/Coupling Recommendations.....	61
Enclosure Installation.....	62
Field Troubleshooting.....	63
Common Questions and Answers .....	66
Applications Hotline .....	68
Product Return Procedure .....	68
Specifications.....	72
Appendix A - Conversion Table .....	74
Pipe Charts.....	75
Appendix C – Liquid Speed of Sound.....	80
Appendix D.....	87

*IMPORTANT NOTE: This instrument is manufactured and calibrated to meet product specifications. Please read this manual carefully before installation and operation. Any unauthorized repairs or modifications may result in a suspension of the warranty. If this product is not used as specified by the manufacturer, protection may be impaired.*

*Available in Adobe Acrobat pdf format*

**CONNECTIONS:**

**POWER INPUT:** The standard model requires AC power input between 100 to 240 VAC 50/60Hz 10VA. No adjustments are necessary for voltages within this range. Connect L (Live) N (Neutral) and AC Ground.

Optional DC input model requires 9-32 VDC/10 Watts. Connect to + and - terminals.

Optional Thermostat and Heater modules are available rated for specifically 115 VAC or specifically 230 VAC.

**IMPORTANT NOTE:** To comply with electrical safety standards, AC power input and relay connection wires must have conduit entry to the instrument enclosure. Installation requires a switch, overcurrent fuse or circuit breaker in the building (in close proximity to the equipment) that is marked as the disconnect switch.




Risk of electric shock. Loosen cover screw to access connections. Only qualified personnel should access connections.

Note: Use of instrumentation over 40°C ambient requires special field wiring.

Note: Some models feature a user replaceable fuse. Fuse is 2 Amp 250V (T2AL250V), located on the power supply.


**100-240 VAC Meter Connections**

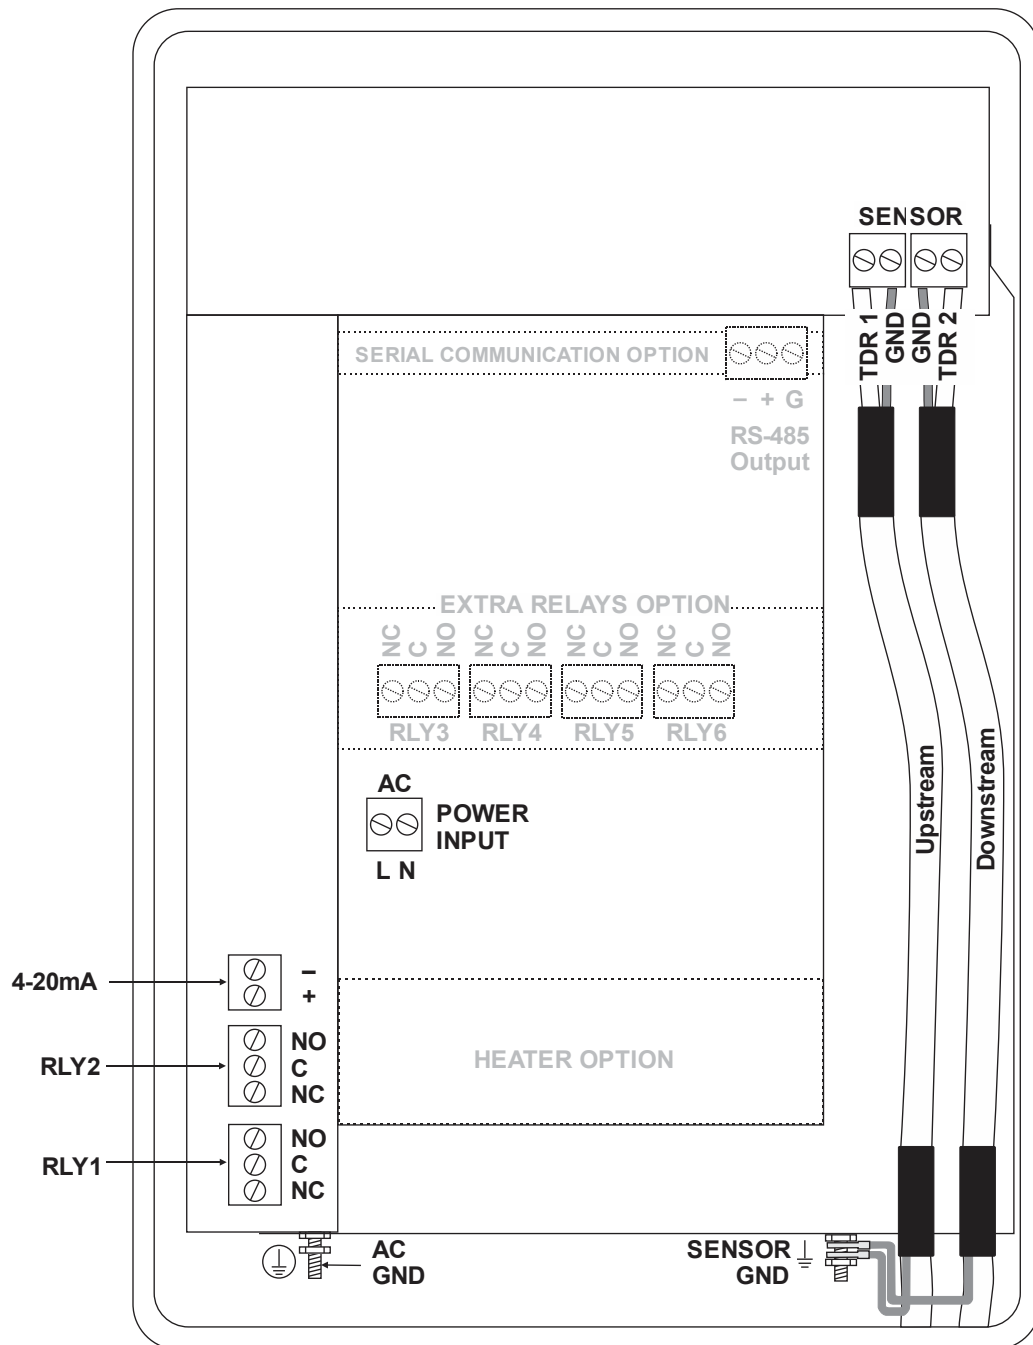


## **KEYPAD SYSTEM**

The diagram on page 7 shows the CUTT menu system. Arrows show the four directions to leave a menu box. Pressing a corresponding keypad arrow will move to the next item in the direction shown. Move the cursor (highlighted) under numerals and increase or decrease numerals with the ▼ or ▲ keys.

To store calibration values permanently (even through power interruptions), press the **ENTER** button.

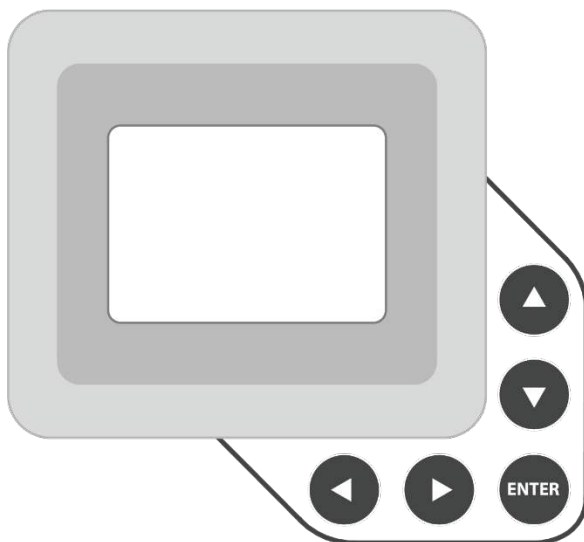

## MENU SYSTEM

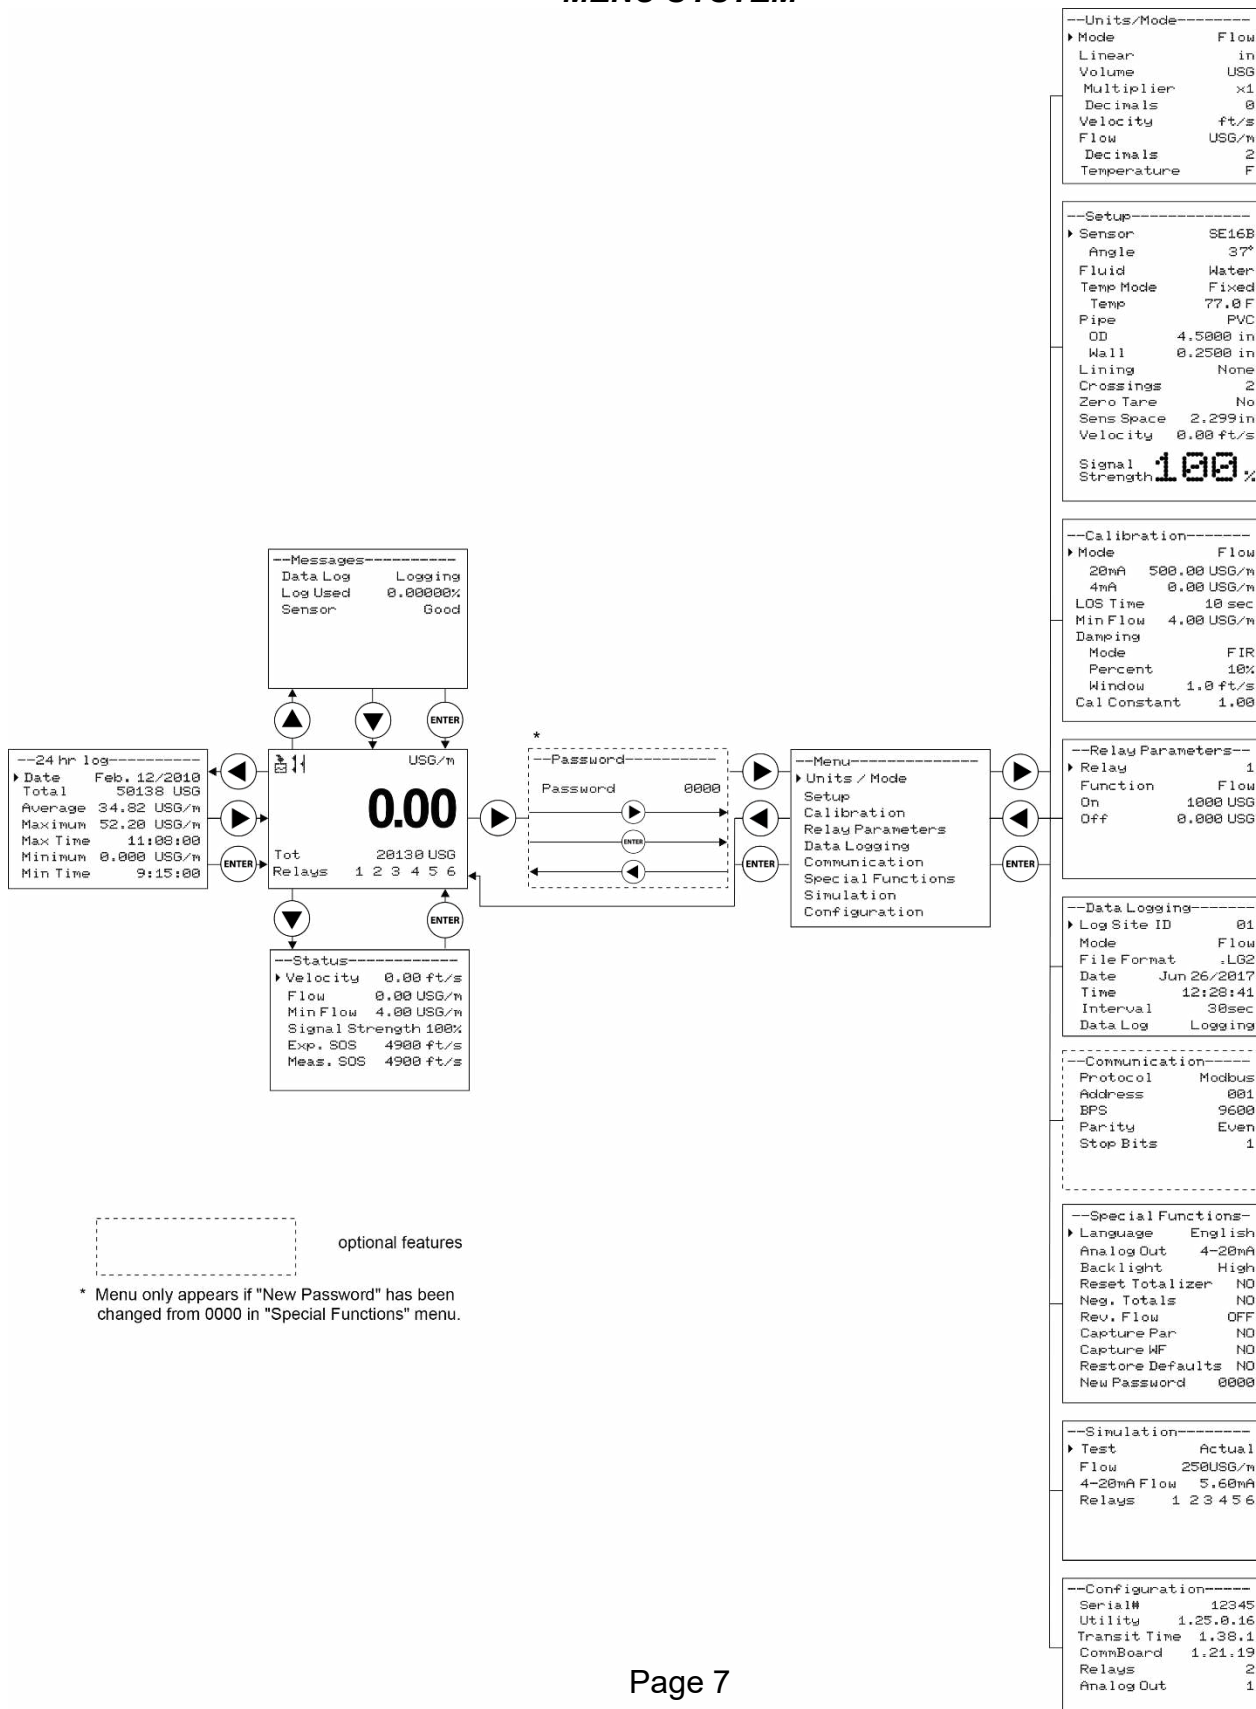

## ICONS



1.



2.

Message waiting. Press ▲ from main page to view



Data logging off



1.



2.

Data logging on



1.



2.



3.



4.

USB file downloading



File download completed



Download Error



1.



2.



3.

CUTT Echo OK



CUTT – Low Signal/No Echo, Empty Pipe or High Aeration




CUTT – No Sensors Attached/Wrong Settings






## MAIN DISPLAY

The Main Display shows the units selected from the Units/Mode menu, flow rate or velocity rate being measured, totalizer, totalizer multiplier, and relay states. The CUTT will go to this display after start-up.

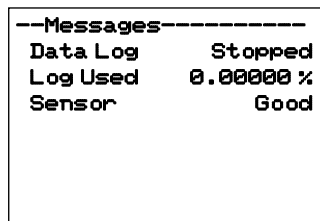

## MESSAGE ICON

Press **▲** from the Main Display to view status of the data logger and error/warning messages provided by the instrument. The Message Icon will appear on the Main Display if error messages are being generated by the instrument. Press **ENTER** to return to the Main Display.

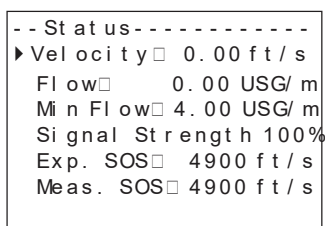

## STATUS

Press **▼** from the Main Display to view Status of the measurement. Press **ENTER** to return to the Main Display.

**Velocity** Displays flow velocity in ft/s or m/s, selected in the Units/Mode menu.

**Flow** Displays flow rate in units selected in the Units/Mode menu. A list of flow rate units is provided in the Units/Mode section of the manual.

**Min Flow** Displays a read-only value for the minimum flow cutoff, in units which match the Flow selection. Measured flow rates below the Min Flow will result in the displayed flow rate on the LCD display to be 0.0. This parameter is used to suppress electrical noise at zero flow conditions, and it is typically set to the flow rate equivalent of 0.1 ft/sec in the programmed pipe size. The Min Flow can be adjusted in the Calibration menu.

**Signal Strength** Displays magnitude of signal being received by the ultrasonic sensors. 100% is the ideal signal strength. Signal strengths less than 100% could indicate poor pipe conditions (corrosion), highly aerated water, or programmed setup parameters which don't closely match field conditions. Consideration should be made to use 1-cross installation method in such cases, if not already using it.

### Status (cont.)

```
-- Status-----
▶ Velocity □ 0.00 ft/s
  Flow □ 0.00 USG/m
  Min Flow □ 4.00 USG/m
  Signal Strength 100%
  Exp. SOS □ 4900 ft/s
  Meas. SOS □ 4900 ft/s
```

Exp. SOS

Displays the expected fluid speed of sound measurement, in units that match the Velocity. The expected speed of sound is based on the pipe, fluid, and temperature selection in the Setup menu.

Meas. SOS

Displays the measured fluid speed of sound, in units that match Exp. SOS. The meter calculates this value based on the time it takes for the signal to arrive from one transducer to another. Large differences between expected and measured speed of sound (> 10%) typically indicate an error in the setup of the instrument. Verify the following are correct in the Setup menu and with the physical installation of the transducers:

- Pipe Material
- Pipe OD
- Pipe Wall Thickness
- Liner Type
- Liner Thickness
- Fluid Type
- Fluid Temperature
- Crossings
- Separation Distance

```

--24 hr log-----
►Date      Feb. 12/2010
Total      50138 USG
Average    34.82 USG/m
Maximum    52.20 USG/m
Max Time   11:08:00
Minimum    0.000 USG/m
Min Time   9:15:00
  
```

## 24 HR LOG

Press ◀ from the Main Display to view a formatted flow report. Press ▼ to scroll down one day or repeatedly to scroll to a specific date. Up to 365 days will be stored. Newest date will overwrite the oldest. Press ✓ to return to the Main Display.

**IMPORTANT:** Inserting a USB drive into the meter while on this screen will transfer 24 HR Log data to the USB drive in .csv format.

```

--Password-----
Password      0000
  
```

## PASSWORD

The Password (a number from 0000 to 9999) prevents unauthorized access to the Calibration menu.

From the Main Display press the ► key to get to Password. Factory default password is 0000 and if it has not been changed, this screen will be bypassed completely.

A new password can be stored by going to the Special Functions New Password menu.

If a user password is required, press ► to place the cursor under the first digit and ▼ or ▲ to set the number, then ► to the second digit, etc. Press ► or **ENTER** to proceed to the Menu Selections screen.

```

--Menu-----
►Units / Mode
Setup
Calibration
Relay Parameters
Data Logging
Communication
Special Functions
Simulation
Configuration
  
```

## MENU SELECTIONS

The Menu selections page is used to navigate to specific menus which are described in more detail on the following pages.

Press ▼ or ▲ to navigate to different menus, and ► to enter the selected menu.

-- Units/ Mode-----	
► Mode <input type="checkbox"/>	Flow
<input type="checkbox"/> Linear <input type="checkbox"/>	in
<input type="checkbox"/> Volume <input type="checkbox"/>	USG
<input type="checkbox"/> Multiplier <input type="checkbox"/>	x1
Decimals <input type="checkbox"/>	0
<input type="checkbox"/> Velocity <input type="checkbox"/>	ft / s
<input type="checkbox"/> Flow <input type="checkbox"/>	USG/ m
Decimals <input type="checkbox"/>	2
<input type="checkbox"/> Temperature <input type="checkbox"/>	F

## UNITS/MODE

At Mode, press the ► and then the ▼ or ▲ to select Flow or Velocity. Flow mode displays the flow rate in engineering units (e.g. gpm, litres/sec, etc.) Press the **ENTER** to store your selection then the ▼ to the next menu item.

At Linear press the ► key and then the ▼ or ▲ to select your units of measurement. The Linear units define what units the pipe dimensions and sensor spacing will be displayed in. Typically inches or mm is selected. Press the **ENTER** to store your selection then the ▼ to the next menu item.

At Volume, press the ► and then the ▼ or ▲ to select units for volume. Note: “bbl” denotes US oil barrels. Press the **ENTER** to store your selection then the ▼ to the next menu item.

At Multiplier, press the ► and then the ▼ or ▲ to select the totalizer multiplier. Multipliers are used when resolution down to single digit is not required, or when you don’t want to convert from gallons to thousands of gallons, as an example. Press **ENTER** to store your selection then ▼ to the next menu item.

At Decimals (Volume), press the ► and then the ▼ or ▲ to select the number of decimal points to be present on the totalizer display on the LCD screen. Default = 0. Options = 0, 1, 2. Press the **ENTER** to store your selection then the ▼ to the next menu item.

At Velocity, press the ► and then the ▼ or ▲ to select the engineering units for flow velocity and sonic velocity of the fluid. Press **ENTER** to store your selection then ▼ to the next menu item.

--Units/Mode-----	
► Mode	Flow
Linear	in
Volume	USG
Multiplier	x1
Velocity	ft/s
Flow	USG/m
Temperature	F

### UNITS/MODE (cont.)

At Flow, press the ► and then the ▼ or ▲ to select the engineering units for flow rate. Press **ENTER** to store your selection then ▼ to the next menu item.

#### Available Flow Rate Engineering Units:

Abbreviation	Description	Abbreviation	Description
USG/d	US gallons per day	L/d	liters per day
USG/h	US gallons per hour	L/h	liters per hour
USG/m	US gallons per minute	L/m	liters per minute
USG/s	US gallons per second	L/s	liters per second
ft <sup>3</sup> /d	cubic feet per day	m <sup>3</sup> /d	cubic meters per day
ft <sup>3</sup> /h	cubic feet per hour	m <sup>3</sup> /h	cubic meters per hour
ft <sup>3</sup> /m	cubic feet per minute	m <sup>3</sup> /m	cubic meters per minute
ft <sup>3</sup> /s	cubic feet per second	m <sup>3</sup> /s	cubic meters per second
bbl/d	barrels per day (1 bbl = 42 USG)	IG/d	Imperial gallons per day
bbl/h	barrels per hour (1 bbl = 42 USG)	IG/d	Imperial gallons per day
bbl/m	barrels per minute (1 bbl = 42 USG)	IG/d	Imperial gallons per day
bbl/d	barrels per second (1 bbl = 42 USG)	IG/d	Imperial gallons per day
USMG/d	US million gallons per day	IMG/d	Imperial million gallons per day
USMG/h	US million gallons per hour	IMG/h	Imperial million gallons per hour
USMG/m	US million gallons per minute	IMG/m	Imperial million gallons per minute
USMG/s	US million gallons per second	IMG/s	Imperial million gallons per second

At Decimals (Flow), press the ► and then the ▼ or ▲ to select the number of decimal points to be present on the flow rate display on the LCD screen. Default = 2. Options = 0, 1, 2. Press the **ENTER** to store your selection then the ▼ to the next menu item.

At Temperature, press the ► and then the ▼ or ▲ to select units for temperature. Press the **ENTER** to store your selection then the ▲ to go back to another menu item, or ◀ to exit back to the Menu Selection screen.

```

--Set up-----
► Sensor □      SE16B
□ □Angle□      37°
□ Fluid□       Water
□ Temp Mode□   Fixed
□ □Temp□       77.0 F
□ Pipe□        PVC
□ □OD□         4.5000 in
□ □Wall□       0.2500 in
□ Lining□      None
□ Crossings□   2
□ Zero Tare□   No
□ Sens Space□  2.299 in
□ Velocity□    0.00 ft/s

□ Signal 100 %
□ Strength
  
```

## SET UP

Press ▼ or ▲ to position cursor at Setup, and ► to enter. Use ▼ or ▲ to position cursor before each menu item and ► to enter. When settings are completed press **ENTER** to store and **ENTER** again to return to the Main Menu.

**Sensor Select** Choose SE16B or SE16A, depending on transducers connected to CUTT.

**Angle** For SE16B only, select angle which matches the transducer pair connected to the CUTT. Options: 35, 37, 39, and 41. Angle is determined by the part number on the SE16-B transducer label. Guide:

Part Number on SE16-B Label	Corresponding Transducer Angle
SE16-B-35	35
SE16-B-37	37
SE16-B-39	39
SE16-B-41	41

**Fluid** Select fluid type.

**Vel@25C** When Fluid = Other, enter the fluid velocity at 25C from table or other reference. Engineering units may be m/s or ft/s depending on Units menu programming.

**dV/C** When Fluid = Other, Enter fluid velocity adjustment factor over change in temperature in units of m/s or ft/s per °C.

**Temp Mode** Choose Fixed.

**Temp** Enter fluid operating temperature in displayed engineering units.

**Pipe** Select pipe material.

**Pipe Vel** When Pipe = Other, enter pipe material speed of sound (consult factory).

**OD** Highlight the digits and then ▼ or ▲ to change the numbers and decimal point. Pipe OD should be entered as the exact outside diameter of the pipe where the sensor is mounted. Refer to the Pipe Charts Appendix in this manual for outside diameter of common pipe types and sizes.

```

--Set up-----
► Sensor ☐ SE16B
☐ Angle ☐ 37°
☐ Fluid ☐ Water
☐ Temp Mode ☐ Fixed
☐ Temp ☐ 77.0 F
☐ Pipe ☐ PVC
☐ OD ☐ 4.5000 in
☐ Wall ☐ 0.2500 in
☐ Lining ☐ None
☐ Crossings ☐ 2
☐ Zero Tare ☐ No ☐
☐ Sens Space ☐ 2.299 in
☐ Velocity ☐ 0.00 ft/s

☐ Signal 100 %
☐ Strength
  
```

Wall

Enter pipe wall thickness. Pipe wall thickness should be entered as the exact wall thickness of the pipe where the sensor is mounted. Refer to the Pipe Charts Appendix in this manual for wall thicknesses of common pipe types and sizes.

Lining

Select liner material.

**SET UP (cont.)**

Vel


When Lining = Other, enter speed of sound of liner (consult factory).

Thick


When Lining ≠ None, enter liner thickness.

Crossings


Crossings 1 = Z  
mounting

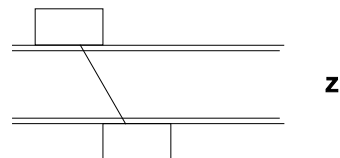

Crossings 2 = V  
mounting

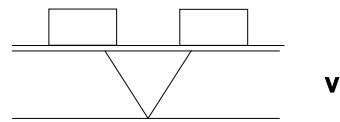

Crossings 4 = W  
mounting

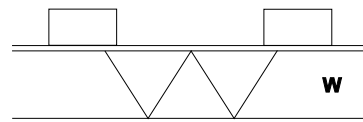

Nominal Pipe Size, Inches	Recommended Crossings
0.5-1.5	Crossings = 4
2-24	Crossings = 2
> 24	Crossings = 1

Older pipes are often degraded or scaled on the inside. These conditions can hinder the ability to receive a strong signal when Crossings = 2. AW-Lake suggests starting with Crossings = 1 in cases such as these.

Zero Tare

Used to calibrate zero-flow measured by the CUTT in process. Flow in the pipe should be confirmed as 0 before

enabling, or significant errors in flow accuracy could occur.

Set Calibration/Damping to 0%, and under no flow conditions and with a full pipe, select Yes to force readings to zero.

Sens Space	After sensor, angle, fluid, and pipe material are defined, this displays the calculated sensor spacing. Also called the separation distance. The sensors will be set to this dimension when installed on the pipe, as described later in this manual.
Velocity	Displays the measured velocity after the sensors have been connected at the specified separation distance.



```

-- Set up -----
► Sensor ☐ SE16B
☐ Angle ☐ 37°
☐ Fluid ☐ Water
☐ Temp Mode ☐ Fixed
☐ Temp ☐ 77.0 F
☐ Pipe ☐ PVC
☐ OD ☐ 4.5000 in
☐ Wall ☐ 0.2500 in
☐ Lining ☐ None
☐ Crossings ☐ 2
☐ Zero Tare ☐ No ☐
☐ Sens Space ☐ 2.299 in
☐ Velocity ☐ 0.00 ft/s

☐ Signal Strength 100 %
  
```

**SET UP (cont.)**
**Signal Strength**

Displays magnitude of signal being received by the ultrasonic sensor. Should be 100% under ideal operating conditions. Signal strengths less than 100% do not indicate that the meter is not reliable, however, the meter may be more susceptible to complete signal loss should process conditions like entrapped air worsen. When signal strength is less than 100%, consideration should be made to using 1-cross mounting method if this is not the current mounting mode.

```

-- Calibration-----
▶ Mode□          FI ow
□ 20mA □ 500.00 USG/ m
□ 4mA □ 0.00 USG/ m
LOS Ti me□      10 sec
Mi n FI ow□    4.00 USG/ m
Dampi ng□
□ Mode□          FI R
□ Percent □      10%
□ W ndow□       1.0 ft / s
Cal Constant □ 1.00
  
```

## CALIBRATION

Press ▼ or ▲ to position cursor at Calibration menu, and ► to enter. Use ▼ or ▲ to position cursor before each menu item and ► to enter. When settings are completed press **ENTER** to store and **ENTER** again to return to the Main Menu.

**Mode** Displays the Mode which was selected in the Units/Mode menu. This is read-only.

**20mA** Press ► then ▼ or ▲ to change the numbers and decimal point position. Use this menu to set the corresponding flow rate that will be represented by 20mA analog output. If maximum flow is unknown, enter an estimated flow rate and observe actual flow to determine the correct maximum value. Any velocity or flow rate up to +40 ft/sec (12.0 m/sec) may be selected.

**4mA** Press ► then ▼ or ▲ to set the flow rate corresponding to 4mA analog output. This setting may be left at zero or can be raised to any value less than the 20mA setting, or lowered to any velocity or corresponding flow rate down to -40 ft/sec (-12 m/sec).

**LOS Time** Use LOS Time to suppress intermittent loss of signal. Example: systems with high concentrations of undissolved gasses will cause fluctuations in signal strength when the gasses move past the ultrasonic signal. If a complete loss of signal is experienced, the CUTT will hold the last valid reading for the duration of the LOS Time. If the signal strength returns before the LOS Time is expired, because the ultrasonic signal is no longer being impeded, the meter will return to normal operation automatically. If signal strength does not return after the LOS Time has expired, then the meter will report zero flow on the LCD display and outputs, and produce a Low Signal alarm. Default LOS Time is 30 seconds, and the value can be set between 0 and 99 seconds.

**Min Flow** Flow rates below this setting will be displayed as zero flow. Default flow rate is ~ 0.1 ft/sec for the pipe size programmed in the Setup menu.

```

-- Calibration-----
► Mode ☐ Flow
☐ 20mA ☐ 500.00 USG/ m
☐ 4mA ☐ 0.00 USG/ m
LOS Time ☐ 10 sec
Min Flow ☐ 4.00 USG/ m
Damping ☐
☐ Mode ☐ FIR
☐ Percent ☐ 10%
☐ Window ☐ 1.0 ft/s
Cal Constant ☐ 1.00
  
```

## CALIBRATION (cont.)

### Damping

#### Mode

Choose between OFF, FIR (Default), or LOW PASS.

When measured flows are outside the Window of the running average, the FIR filter will reduce the damping average so that a fast response can be made to the sudden change in flow rate.

The LOW PASS filter will ignore measured flow rates outside the Window, while holding the running average, until there are enough data points outside the Window to cause a step-response to the new measured value.

While measured flows are within the Window of the running average, both the FIR and LOW PASS filter behave the same.

#### Percent

Higher percentages increase the number of measurements which are averaged together to produce a stable flow reading. Higher percentages also increase the time it takes for the meter to make a step-response to the measured flow rate outside the Window in the LOW PASS Mode.

#### Window

Defines the Window around the running average, in units of Velocity set in the Units/Mode menu. Measurements made inside the Window are added to the running average, and measurements outside the Window effect the response of the meter as described in the Mode section.

#### Cal Constant

Calibration constant defined when the CUTT was calibrated at the AW-Lake factory.

Press **ENTER** to return to Menu Selections.

```

-- Relay Parameters --
▶Relay 1
Function Flow
On 1000 USG
Off 0.000 USG
  
```

## RELAY PARAMETERS

Press ▼ or ▲ to position cursor at Relay Parameters, and ► to enter. Use ▼ or ▲ to position cursor before each menu item and ► to enter. When settings are completed press **ENTER** to store and **ENTER** again to return to the Main Menu.

**Relay** Press ► and ▼ or ▲ to select a corresponding relay number (2 relays are standard, 4 additional are optional).

**Function** Press ▼ or ▲ to select Off, On, Pulse, Direction, or Flow.

**Pulse** Press ▼ and set digits to the flow volume increment required between relay pulses. Use this feature for remote samplers, chlorinators or totalizers. Minimum time between pulses is 2.25 seconds and pulse duration is 350 milliseconds.

Return to Relay and change settings for each relay number.

Press **ENTER** to return to Menu Selections.

**Direction** When flow is in the positive direction, the relay will be disengaged, when flow is negative, the relay engages. Note: Rev. Flow in the Special Functions menu must be ON or INVERT for this to work properly.

**Flow** Mode Select Pump

Pump mode provides separate On/Off settings where the relay will energize at one flow rate and de-energize at another.

**On** Highlight the numerals and press ▼ or ▲ to set digits to the required relay On set point.

**Off** set digits to the required Off set point.

```

--Data Logging-----
▶Log Site ID      00
                  99
Mode              Flow
                  Velocity
Set Date Feb 18/2008
Set Time 11:27:40
Interval 10sec
           60min
           30min
           15min
           10min
           5min
           2min
           1min
           30sec
Log          Stop
             Start
             Delete
  
```

## DATA LOGGING

Press ▼ or ▲ to position cursor at Data Logging, and ► to enter. Use ▼ or ▲ to position cursor before each menu item and ► to enter. When settings are completed press **ENTER** to store and **ENTER** again to return to the Main Menu.

Log Site ID	Enter a number from 00 to 99. The site ID will become part of the downloaded file name to help distinguish downloads from different instruments. Press <b>ENTER</b> to store the setting.
Mode	Select Velocity (e.g. ft/sec or m/sec) or Flow (e.g. USGPM or l/sec). Press <b>ENTER</b> to store the setting. This setting cannot be changed after a log was started. To change, first stop the log, then change the mode.
File Format	Choose .LG2 to download data in .lg2 format for viewing on AW-Lake Logger software. Choose .CSV to download data in .csv format for import directly to Excel. This menu option can be changed at any time without adversely affecting existing data.
Date	Press ►, and ▼ or ▲ to scroll and select Month, Day and Year. Press <b>ENTER</b> to store the setting.
Time	Press ►, and ▼ or ▲ to select the current time in Hours, Minutes and Seconds. Press <b>ENTER</b> to store the setting.
Interval	Press ▼ or ▲ to select the logging interval. Press <b>ENTER</b> to store the setting. AW-Lake recommends choosing an interval which will give you as much resolution as required and no more. Choosing too often of an interval for what is required will result in larger data files, which may take a long time to download to USB. Reference page 18 for specific download times. In critical installations, data should be downloaded often.
Data Log	Stop, Start or Delete the log file. Press ▼ or ▲ to select Delete and <b>ENTER</b> to delete the log file. Press ▼ or ▲ to select Start and <b>ENTER</b> to start the logger.

**Important Note:** You MUST Delete an old log and Start a new log AFTER having made changes to Log Site ID, Mode, Date, Time and/or Interval for those changes to be applied.

**Important Note:** Changing any of the parameters in the Units/Mode menu will start a new log. It is recommended that you Delete and start a new log after changing any Units/Mode settings.

### **RETRIEVING LOG FILE**

Plug a USB Flash Memory Drive (one is included with the CUTT Ultrasonic flow meter) into the USB output port on the Panel of the meter. The instrument display will show the data download icon until the log file is transferred to the memory card. The USB flash drive may be removed when the icon for download successful appears.

Download file names will appear in this format:

TTFM\_ \_00A.LG2  
↑            ↑    ↑  
MODEL      TAG   DOWNLOAD

Tag is set according to the Log Site ID entered in the instrument Data Logging menu.

Download letter will be A for the first download from an instrument. B for the second, then C etc. At the letter Z a - character will appear indicating that the maximum number of downloads for that instrument are on the USB flash drive.

Older files can be erased or moved from the flash memory drive or a new memory drive can be used.

**Note:** Downloading files in .lg2 format will take approximately 35 seconds per 1% of internal log memory used.

Downloading files in .csv format will take approximately 8 minutes per 1% of internal log memory used.

### **OPENING .LG2 FILES**

Install AW-Lake Logger on your PC or laptop. Select File/Open/Instrument Log (.log) to open the log file from your USB flash drive. AW-Lake Logger software is available on AW-Lake's website, [www.aw-lake.com](http://www.aw-lake.com). Data can also be converted to .CSV via AW-Lake Logger software.

**OPENING .CSV FILES**

Use a datasheet program such as Microsoft Excel® to import data in a comma delimited format. Use Excel to manipulate or graph data.


--Communication-----	
Protocol	Modbus
Address	001
BPS	9600
Parity	Even
Stop Bits	1

### COMMUNICATION (Optional)

Press ▼ or ▲ to position cursor at Communication, and ► to enter. Use ▼ or ▲ to position cursor before each menu item and ► to enter. When settings are completed press **ENTER** to store and **ENTER** again to return to the Main Menu.

#### MODBUS Protocol Information:

Transceiver: 2-wire, half-duplex  
 Data format: 8 Data Bits  
 Floating Point Byte Order: ABCD  
 Termination: Jumper JP1 selectable 120Ω resistor. TB1 & TB2 = OFF, TB2 & TB3 = ON  
 Biasing: None

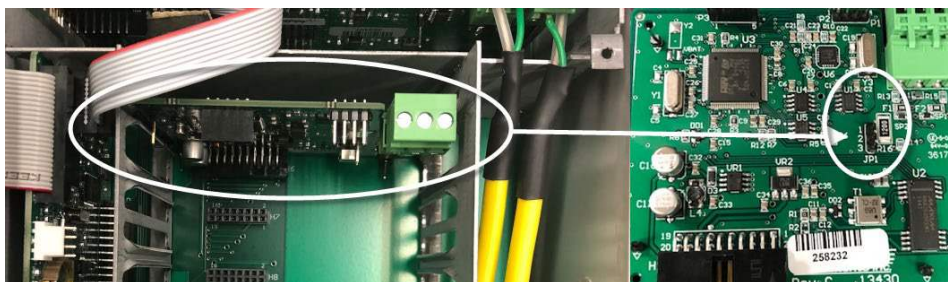

#### HART® (Highway Addressable Remote Transducer) Protocol Information:

HART Version: 7.0  
 Device Description Files: DD files allow the user's handheld HART communicator to fully configure the CUTT. AW-Lake provides DD files for the Emerson 475 Communicator. The files are included in the USB drive provided with your CUTT meter. You may also request the files from AW-Lake by calling or emailing us at [sales@aw-lake.com](mailto:sales@aw-lake.com). **Warning:** The CUTT and associated DDs are pending certification from the Fieldcomm Group.

Connections: HART Protocol uses a digital signal superimposed on the 4-20mA output. When the 4-20mA output of the CUTT is connected with a load resistor (230Ω to 600Ω), the HART communicator can be connected on the loop in order to communicate.



Protocol Choose MODBUS or HART.

Address Device address for the CUTT. Valid range: 001-247  
 (Modbus) (Default: 001). This number should be unique across the bus. Press ▼ or ▲ to scroll, ► to select digits, and press **ENTER** to store the setting.

```

--Communication-----
Protocol      Modbus
Address      001
BPS          9600
Parity       Even
Stop Bits    1
  
```

### COMMUNICATION (Optional) (cont.)

BPS Baud rate for the MODBUS communications. Press ▼ or ▲ to select, and **ENTER** to store the setting. Options: 4800, 9600, 19200, 38400, 57600, 76800, and 115200 (Default: 9600).

Parity Error checking parity for the MODBUS  
 (Modbus) communications. Press ▼ or ▲ to select, and **ENTER** to store the setting. Options: None, Even, and Odd (Default: Even).

Stop Bits Press ▼ or ▲ to select, and **ENTER** to store the setting.  
 (Modbus) Options: 1 or 2 (Default: 1).

**Note:** The Modbus register table, and HART configuration instructions can be found in separate CUTT Serial Communications Manual.

-- Special Functions--	
►Language	English
Analog Out	4-20mA
Backlight	High
Reset Totalizer	NO
Neg. Totals	NO
Rev. Flow	OFF
Capture Par	NO
Capture WF	NO
Restore Defaults	NO
New Password	0000

## SPECIAL FUNCTIONS

Press ▼ or ▲ to position cursor at Special Functions, and ► to enter. Use ▼ or ▲ to position cursor before each menu item and ► to enter. When settings are completed press **ENTER** to store and **ENTER** again to return to the Main Menu.

Language	Select English, French or Spanish
Analog Out	Select 4-20mA or 0-5V mode for the analog output.
Backlight	Select High, Medium or Low for continuous backlight brightness.  Select key Hi/Lo for high backlight lasting 1 minute after a keypress, and then Lo backlight until a key is pressed again.  Select Key High, Med or Low for backlight lasting 1 minute after a keypress and then backlight off until a key is pressed again.
Reset Totalizer	Select Yes to erase and restart the totalizer at zero.
Negative Totals	Select Yes to have reverse flow readings deducted from the totalizer. Select No to totalize forward flow only and ignore reverse flow.
Rev. Flow	Select On to enable flow direction measurement. Select Off to disable flow direction measurement so that flow in either direction is displayed and output as positive values. Select Invert to invert the sense of the flow measurement.
Capture Par	This function captures the programming parameters in the meter. Select Yes, wait for Insrt USB to appear, then insert a USB drive into the USB port to transfer the parameters. After Saving flashes, Done will appear on the screen, meaning it is safe to remove the USB,



### **SPECIAL FUNCTIONS (cont.)**

```

-- Special Functions-
▶ ☐ Language ☐ English
  Analog Out ☐ 4-20mA
☐ Backlight ☐ High
☐ Reset Totalizer ☐ NO
☐ Neg. Totals ☐ NO
  Rev. Flow ☐ OFF
  Capture Par ☐ NO
☐ Capture WF ☐ NO
☐ Restore Defaults ☐ NO
☐ New Password ☐ 0000
  
```

#### **Capture WF**

This function should only be used when instructed by a AW-Lake representative to do so. The function captures the ultrasonic signal so that it can be evaluated by AW-Lake.

Select **Yes** to start the waveform download process. After pressing **Yes**, the screen will flash **Working** for approximately 20 seconds, until the message **Insrt USB** appears. When **Insrt USB** is on the screen, connect a flash drive to the USB port on the front of the meter. The screen will flash **Saving** for a couple seconds, and then return to **Done**. The waveform is now stored on your flash drive and ready to be sent to AW-Lake.

#### **Restore Defaults**

Select **Yes** to erase all user settings and return the instrument to factory default settings. Note: does not reset factory calibration values.

#### **New Password**

Select any number from 0000 to 9999. Default setting of 0000 will allow direct access to the calibration menus. Setting any password other than 0000 will require the password to be entered to access the calibration menus.

Press **ENTER** to return to Menu Selections.

```

--Simulation-----
▶Test           Actual
Flow           250USG/m
4-20mA Flow    5.60mA
Relays 1 2 3 4 5 6
  
```

## **SIMULATION**

Press ▼ or ▲ to position cursor at Simulation, and ► to enter. Use ▼ or ▲ to position cursor before each menu item and ► to enter. When settings are completed press **ENTER** to store and **ENTER** again to return to the Main Menu.


Changes made in the Simulation menu exercise the 4-20mA output, digital display and control relays.

Simulate a Flow /Velocity reading. Press ► and then ▼ or ▲ to change the simulated output. Press **ENTER** to begin simulation. The 4-20mA output and relay states will be displayed on the screen below.


Press the **ENTER** to terminate simulation and return to the Menu Selections screen.

## **TYPICAL SE16B SENSOR INSTALLATION**

**2 Cross Separation Distance**

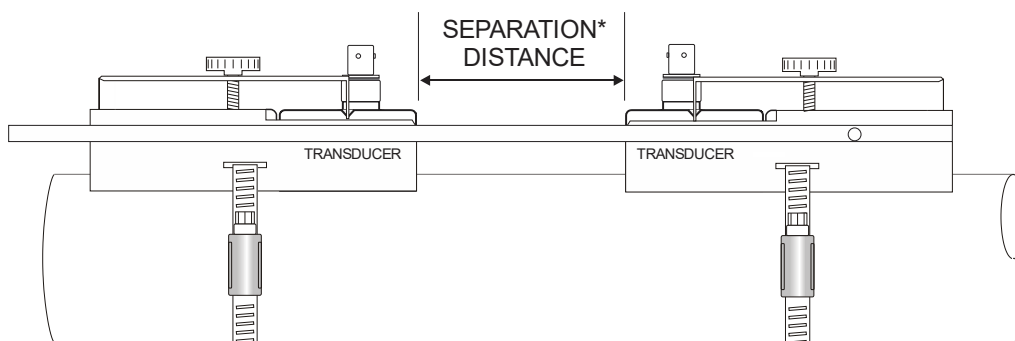

**1 Cross Separation Distance**

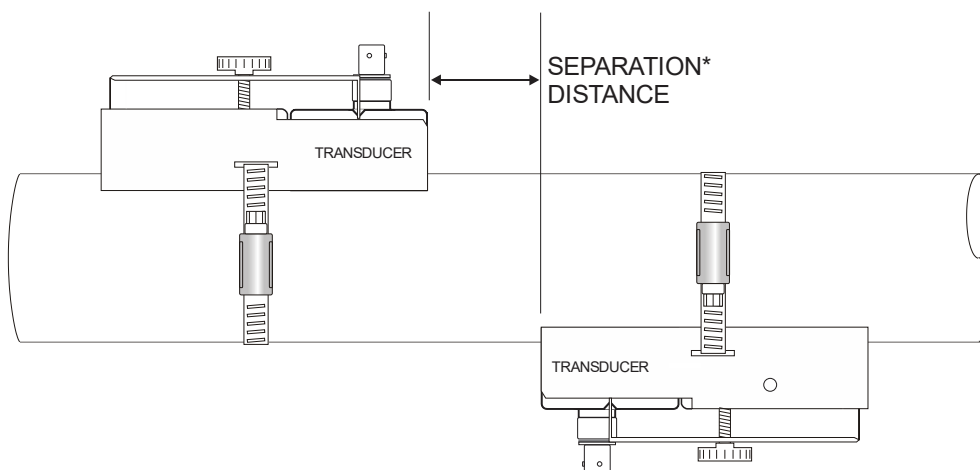


\* Shown in 'Set up' menu after sensor, fluid and pipe parameters are entered.

TMK-B1 transducer mounting kit shown. Sensor spacing method is consistent with TMK-B21 and TMK-B22 kits, but the brackets will be different.

## **TYPICAL SE16A SENSOR INSTALLATION**

### **2 or 4 Cross Separation Distance**

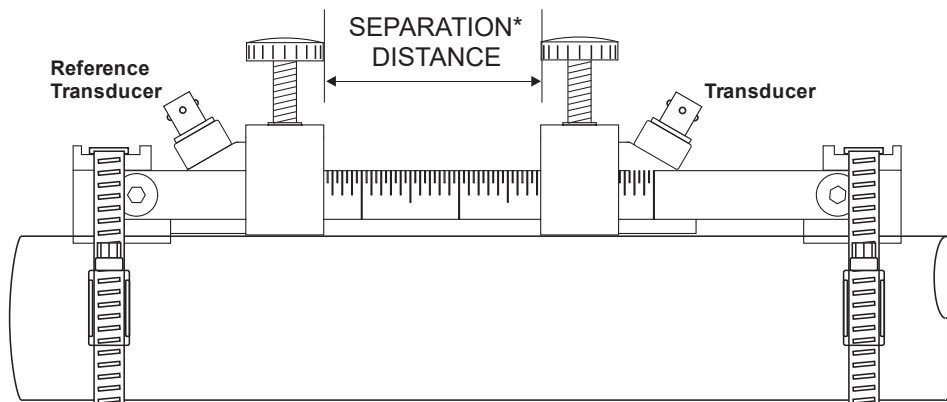

\* Shown in 'Set up' menu after sensor, fluid and pipe parameters are entered.

Separation distance is measured from transducer face to transducer face.  
Reference transducer is placed flush to bracket.


Mount the supplied SE16A Series Transducers on pipes 0.5" / 15 mm OD or larger.

### SE16B Pipe Preparation and Bracket Mounting

Prepare an area 2" wide by 4" long (50mm x 100mm) for each sensor bonding by removing loose paint, scale and rust. The objective of site preparation is to eliminate any discontinuity between the sensor and the pipe wall, which would prevent acoustical coupling. A sanding block is included with every meter to facilitate proper pipe preparation.


A Sensor Mounting Kit is supplied with each AW-Lake flow meter. It includes recommended coupling compound and a stainless steel mounting bracket with adjustable pipe straps. Use the Alignment Bar (included) to align sensor brackets for V and W mode mounting.

**IMPORTANT:** The SE16-B transit-time transducers have arrows on the top of them. These should face each other at installation.

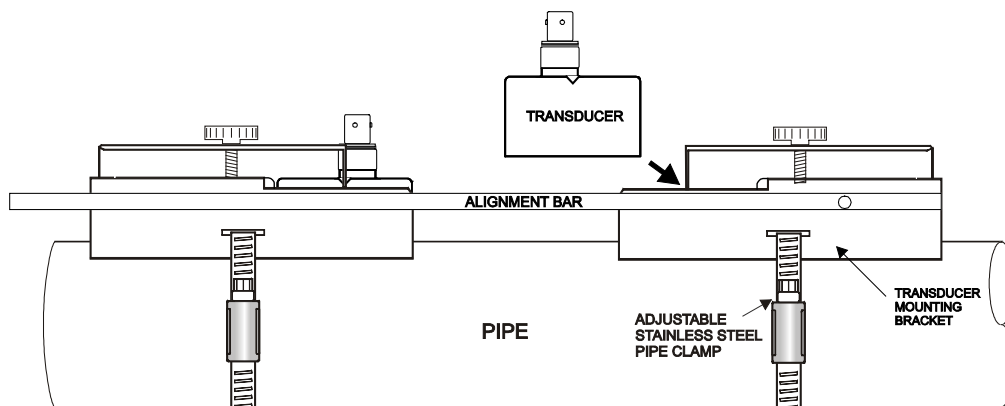

Mount the Mounting Bracket as illustrated on pipes 2" / 50 mm OD or larger. Stainless steel bands are included for mounting on pipes up to 30" / 750 mm OD.

Additional stainless steel bands (provided by customer) may be combined to mount on larger pipes. TMK-B1 Installation Kit shown.

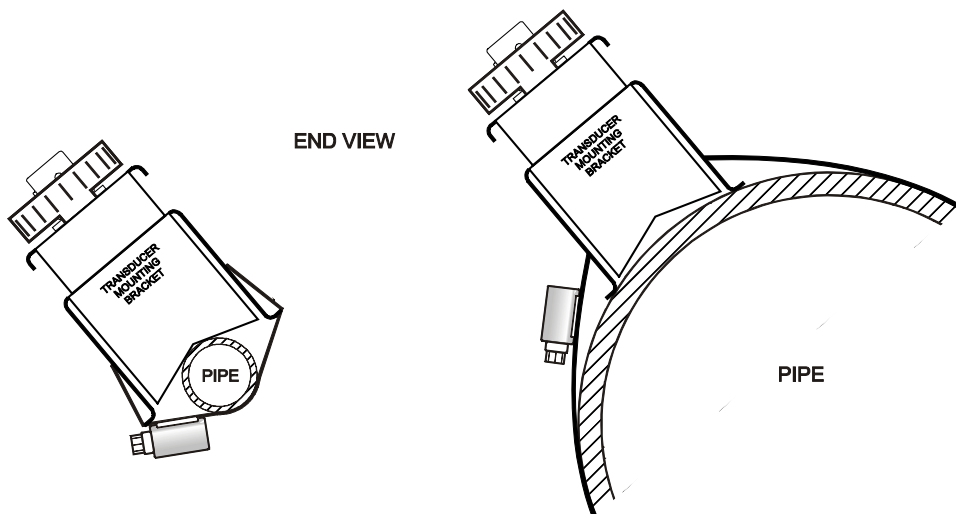




### **SE16A Pipe Preparation and Bracket Mounting**

Prepare an area 2" wide by 10" long (50mm x 250mm) for the track mounting bracket by removing loose paint, scale and rust. The objective of site preparation is to eliminate any discontinuity between the sensor and the pipe wall, which would prevent acoustical coupling. A sanding block is included with every meter to facilitate proper pipe preparation.

A Sensor Mounting Kit is supplied with each AW-Lake flow meter. It includes recommended coupling compound and a stainless steel mounting bracket with adjustable pipe straps. Use the built-in ruler to easily measure separation distance between transducer faces.

**IMPORTANT:** The SE16-A transit-time transducers should be installed with the cable connections pointed away from each other, as shown in the drawing below.

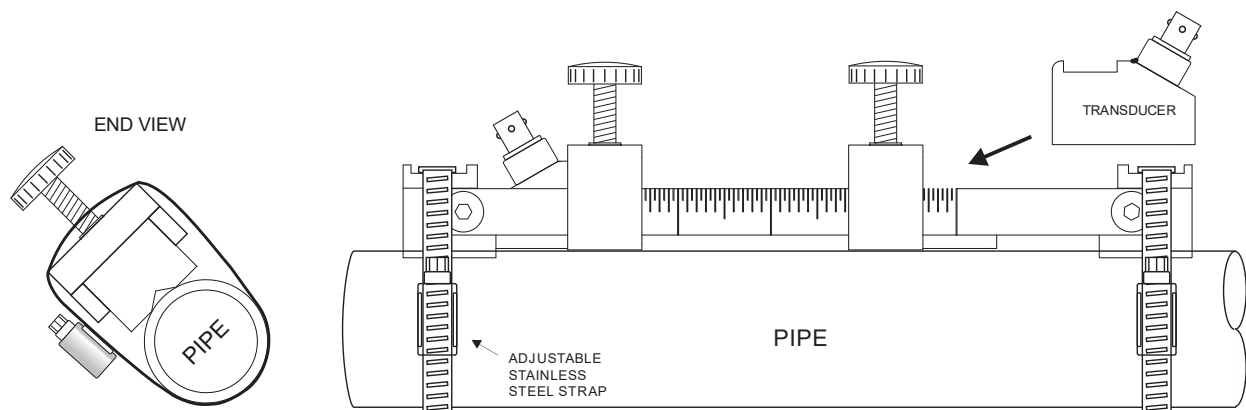


Mount the supplied SE16A Series Transducers on pipes 0.5" / 15 mm OD or larger.

## SENSOR COUPLING

For permanent or temporary bonding, the following are recommended:


- a) Super Lube® (supplied)  
Additional supply: order AW-Lake Option CC-SL30 or your local home improvement store.
- b) Water-based sonic compound: Order AW-Lake Option CC30
- c) Electrocardiograph gel
- d) Petroleum gel (Vaseline)

The above are arranged in their order of preferred application. Option d is only good for temporary bonding at room temperature. **DO NOT USE:** Silicon RTV caulking compound (silicon rubber).

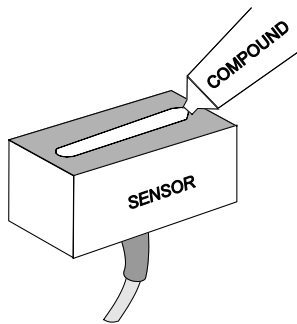

Use the pipe clamp and rail (supplied) as illustrated on previous page. Apply Super Lube® to the colored face of the sensor. A bead, similar to toothpaste on a toothbrush, is ideal. Do not overtighten (crush the sensor).


securely to the material between the sensor face and the with excessive coupling compound can the coupling and cause errors or loss of coupling compound will create similar

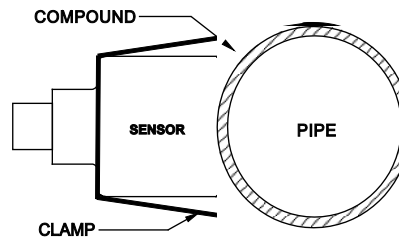

The sensor must be fixed pipe with coupling pipe. Sensor installation result in gaps or voids in signal. Insufficient conditions.

Over time temporary coupling compounds (e.g. Petroleum Gel) may gradually sag away from the sensor resulting in reduced signal strength and finally complete loss of signal. Warm temperatures, moisture and vibration will accelerate this process. Super Lube® as supplied with the CUTT (and available from home improvement stores) is recommended for permanent installations.

### Transducer Installation in Wet Locations


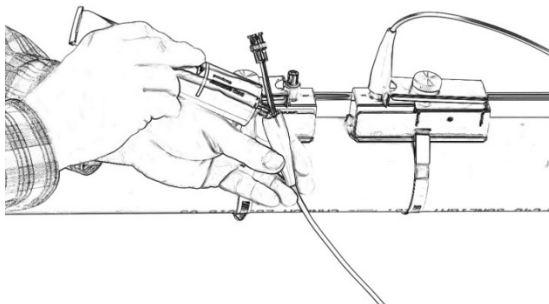


The CUTT Ultrasonic Transit Time Flowmeter transducers are rated for accidental submersion up to 10 psi (0.75 bar). The flowmeter will continue to operate and measure flow accurately during periods of submergence. Plastic seal jackets on the cables must be filled with coupling compound to provide additional moisture protection for the BNC cable connectors.

## SENSOR MOUNTING LOCATION

The position of the sensor is one of the most important considerations for accurate flow measurement. The same location guidelines apply to Transit Time as most other flow meter technologies.

**VERTICAL OR HORIZONTAL PIPE** - Vertical pipe runs are acceptable, and the transducers can be mounted in any orientation around the pipe. Downward flow should be avoided in case the pipe becomes partially filled or aerated. On Horizontal pipes and liquids with high concentrations of gas or solids, the sensors should be mounted on the side (1 to 5 o'clock positions) to avoid concentrations of gas at the top of the pipe, or solids at the bottom.

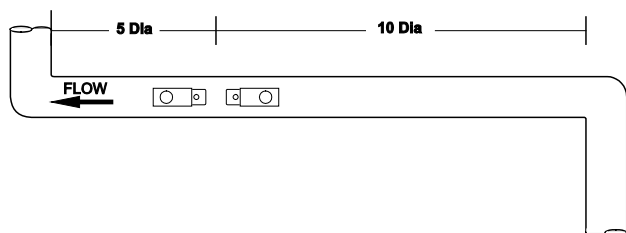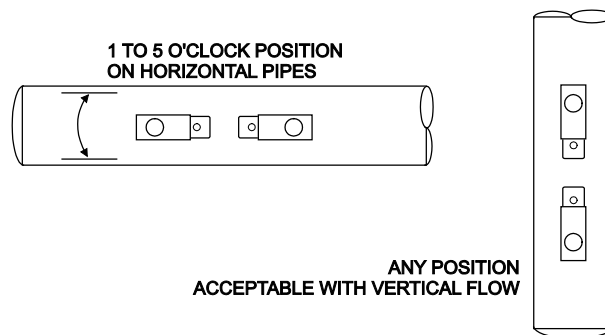

**STRAIGHT RUN REQUIREMENTS** – For best results, the transducers must be installed on a straight run of pipe, free of bends, tees, valves, transitions, insertion probes and obstructions of any kind. **For most installations, ten straight unobstructed pipe diameters upstream and five diameters downstream of the transducers is the minimum recommended distance for proper operation.** Additional considerations are outlined below.

- Do not, if possible, install the transducers downstream from a throttling valve, a mixing tank, the discharge of a positive displacement pump or any other equipment that could possibly aerate the liquid. The best location will be as free as possible from flow disturbances, vibration, sources of heat, noise, or radiated energy.
- Avoid mounting the transducers on a section of pipe with any external scale. Remove all scale, rust, loose paint, etc., from the location prior to mounting the transducers. A sanding block is included with every meter to facilitate proper pipe preparation.
- Do not mount the transducers on a surface aberration (pipe seam, etc.).
- Do not mount transducers from different ultrasonic flow meters on the same pipe.
- Do not run the transducer triaxial cables in common bundles with cables from other instrumentation. You can run these cables through a common conduit **ONLY** if they originate at the same flow meter.
- Never mount transducers under water.

**IMPORTANT NOTE:** In some cases, longer straight runs may be necessary where the transducers are placed downstream from devices which cause unusual flow profile disruptions or swirl. For example: modulating valves, or two elbows in close proximity and out of plane.

**SEPARATION DISTANCE (Sensor Spacing Distance)**

Separation distance is automatically calculated by the CUTT based on parameters entered in the Setup menu. Sens Space is parameter where this distance is given, and it is located in the Setup menu. Document this value for the following transducer installation procedure.

**2 OR 4 CROSS INSTALLATION OVERVIEW – SE16B TMK-B1 Kit**

1. Prep the pipe per instructions on page 29, and mind the installation location requirements on page 32. Clean the location where the sensor is to be mounted on the opposite side of the pipe after we've marked where it will be installed. Picture below shows a very clean ductile iron pipe which did not require much cleaning. The outside paint is very well bonded and did not need to be removed:



2. Install the stainless steel mounting brackets on the pipe. Position them at approximately the correct separation distance. Exact measurement is not required at this time. Tip: Use a 5/16" nut driver to tighten the hose clamps.

*Procedure continued on the next page...*

**2 OR 4 CROSS INSTALLATION OVERVIEW – SE16B Transducers TMK-B1 Kit (Cont.)**

3. Use alignment bar to ensure the brackets are parallel. Completion of steps 2 & 3 is shown below.




4. Mark the position of the permanent bracket on the pipe. This is the bracket that will not be adjusted, and will be used as the reference for the separation distance and alignment. It is your choice which bracket is permanent. With a marker, mark the bracket position by placing the mark directly in front of the stainless side-rail.





**2 OR 4 CROSS INSTALLATION OVERVIEW – SE16B Transducers TMK-B1 Kit (Cont.)**

5. Measure the separation distance from the mark you created in step 4, and create a new mark on the pipe at the separation distance. It may be useful to mark your AW-Lake tape measure (included with every meter) at the separation distance point before marking the pipe. The marked pipe is shown below.

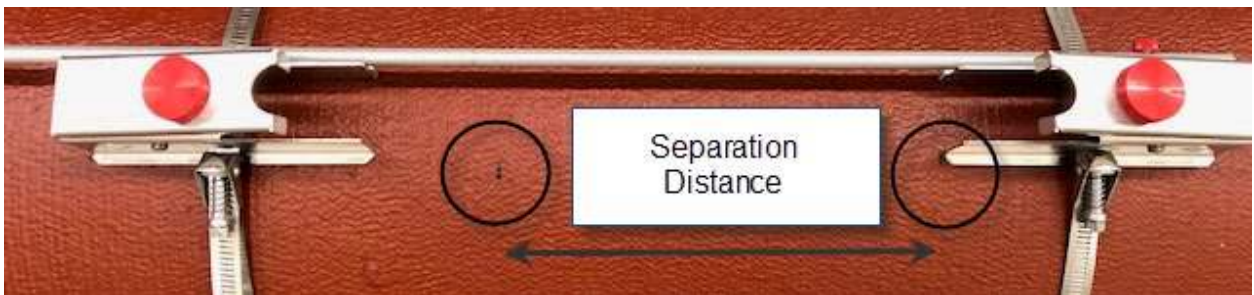

6. Move the non-permanent bracket to position at the mark you created at step 5, and tighten it completely. Apply coupling compound to the transducers, and install them in the brackets.

Tips for installing transducers:

- a. Be sure the red knob on the brackets are loosened completely
- b. Put the transducer into the bracket by ensuring the bottom of the transducer and the couplant does not touch the pipe as you slide it in. (Hover)
- c. With the transducer hovering, tighten the red knob on the bracket until tight. The transducer will be level with the surface of the pipe, and no grease will have smeared off.

(pictures of proper coupling application and finished installation on the next page)

## **2 OR 4 CROSS INSTALLATION OVERVIEW – SE16B Transducers TMK-B1 Kit (Cont.)**

Proper coupling compound application:



Finished installation, ready for cable connection:



7. If you need to make fine adjustments ( $\pm 0.25''$ ) to the spacing at this point, you may do so by loosening the hose clamps slightly, and sliding the brackets while the transducers are installed inside them. Tighten hose clamps when done.

**SEPARATION DISTANCE (Sensor Spacing Distance)**

Separation distance is automatically calculated by the CUTT based on parameters entered in the Setup menu. Sens Space is parameter where this distance is given, and it is located in the Setup menu. Document this value for the following transducer installation procedure.

**1 CROSS INSTALLATION OVERVIEW – SE16B Transducers TMK-B1 Kit**

To assist with the proper installation of the transducers in a 1 cross installation, we provide a kit with every meter, which consists of the following:

- Sanding block
- Tape measure
- Mylar sleeve
- Duct tape
- Level
- Black Sharpie

Follow along with the 1 cross installation instructions on the following pages for a description of where to use these tools.

1. Prep the pipe per instructions on page 29, and mind the installation location requirements on page 32. Clean the location where the sensor is to be mounted on the opposite side of the pipe after we've marked where it will be installed. The picture below shows a very clean ductile iron pipe which did not require much cleaning.





## **1 CROSS INSTALLATION OVERVIEW – SE16B Transducers TMK-B1 Kit (Cont.)**

2. Install one of the stainless steel mounting brackets on the pipe. This will be the stationary bracket not being rotated to the opposite side of the pipe. For a horizontal pipe, position the bracket at 3 or 9 o'clock. Hold the level up to the top of the bracket to ensure the angle is correct. For vertical pipes, the bracket can be at any orientation about the pipe. Tip: Use a 5/16" nut driver to tighten the hose clamp. Install the second bracket at approximately the distance specified by the Sens Space value in the Setup menu.



3. Use alignment bar to ensure that the brackets are parallel. Completion of steps 2 and 3 is shown below.



### **1 CROSS INSTALLATION OVERVIEW – SE16B Transducers TMK-B1 Kit (Cont.)**

4. Mark the position of the bracket on the pipe. Mark both where the front of the bracket is, as well as the center of the bracket.



5. Measure the separation distance from the marks you created in step 4, and create new marks on the pipe at the separation distance. It may be useful to mark your tape measure at the separation distance before holding it up to and marking the pipe.




**1 CROSS INSTALLATION OVERVIEW – SE16B Transducers TMK-B1 Kit (Cont.)**

6. Using the mylar sleeve included with the installation kit, wrap it around the pipe, keep it taut, and with the Sharpie, draw a line anywhere the sleeve overlaps:





7. Lay the mylar sleeve flat, use duct tape to help hold it flat if you need to, and use the tape measure to measure half way between the two marks created when you wrapped the mylar around the pipe:

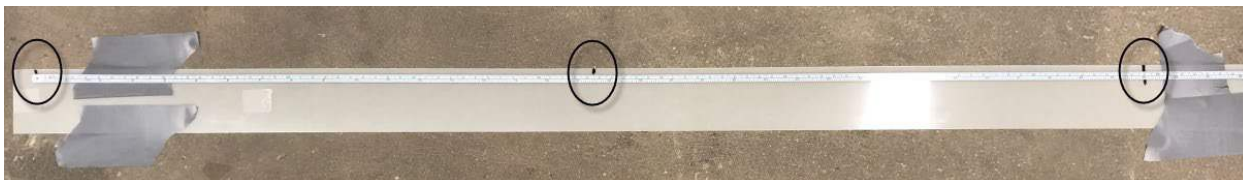



**1 CROSS INSTALLATION OVERVIEW – SE16B Transducers TMK-B1 Kit (Cont.)**

8. Position the marked mylar back on the pipe, with the overlap marks on the center line of the transducer bracket that will be rotated to the other side of the pipe. Be sure the mylar is parallel with the face of the transducer. Use duct tape to hold the mylar together and to the pipe. While the mylar is in this position, mark the opposite side of the pipe where the mylar is marked from step 7:

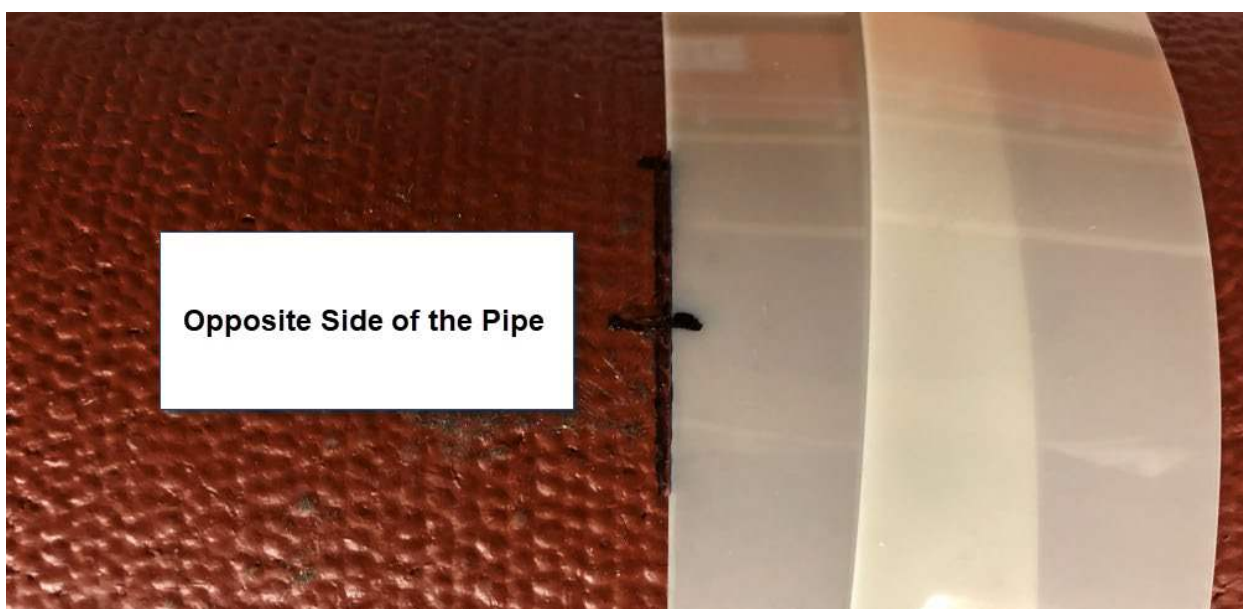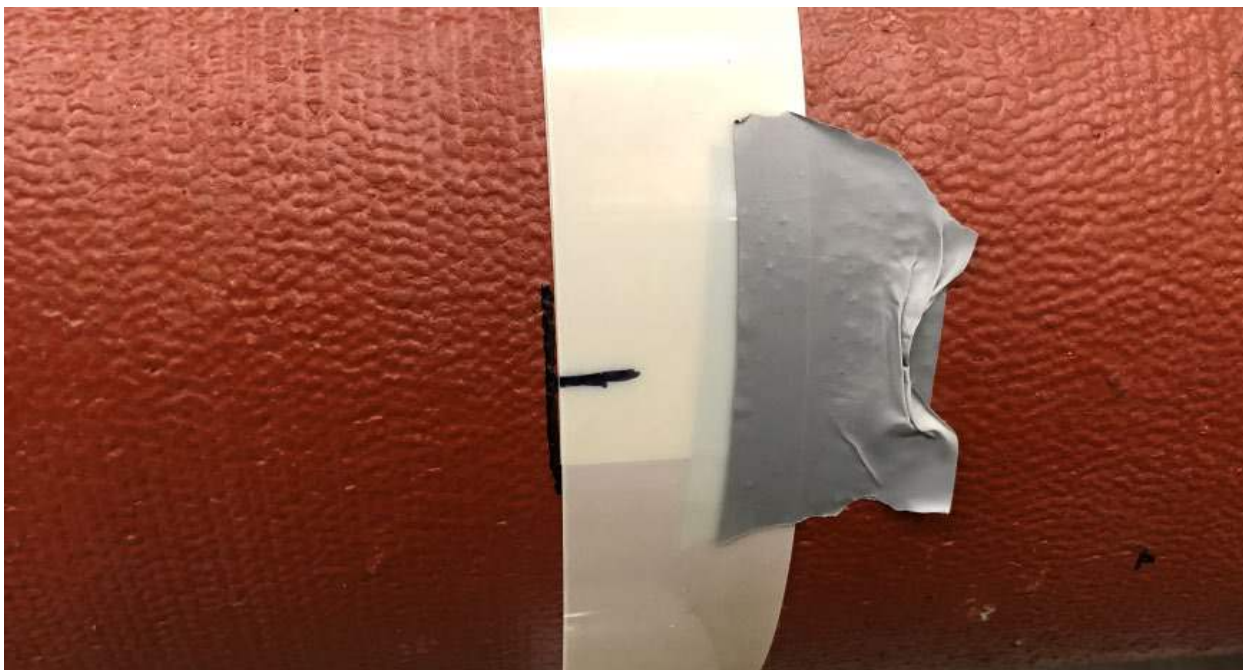

## **1 CROSS INSTALLATION OVERVIEW – SE16B Transducers TMK-B1 Kit (Cont.)**

9. Sand the pipe at this position if it needs to be prepped because of scale or rust. After prepped, move the bracket to this 1 cross mark, and tighten it in place. Apply coupling compound to the transducers and place them in the brackets:

Tips for installing transducers:


- a. Be sure the red knob on the brackets are loosened completely.
- b. Put the transducer into the bracket by ensuring the bottom of the transducer and the couplant does not touch the pipe as you slide it in (hover).
- c. With the transducer hovering, tighten the red knob on the bracket until tight. The transducer will be level with the surface of the pipe, and no grease will have smeared off from inserting the transducer in the bracket.

Proper coupling compound application:



## **1 CROSS INSTALLATION OVERVIEW – SE16B Transducers TMK-B1 Kit (Cont.)**

Finished installation:

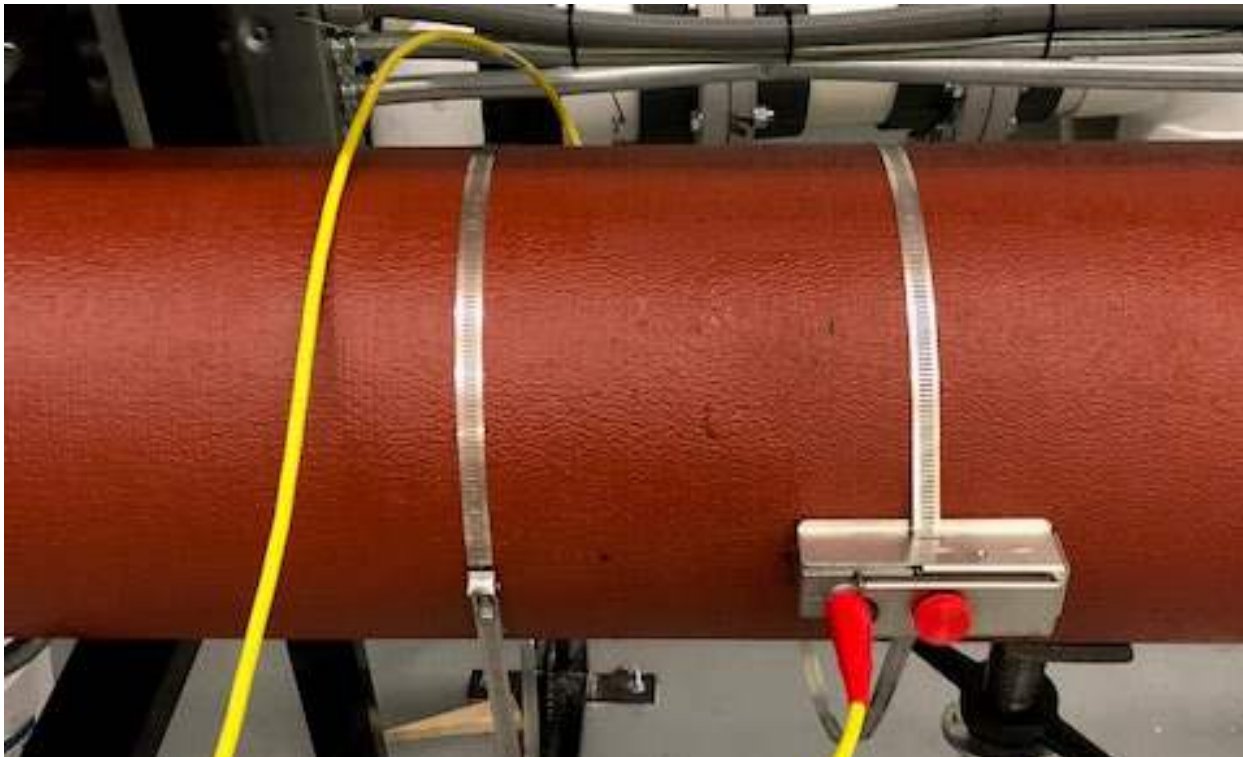

10. If you need to make fine adjustments ( $\pm 0.25''$ ) to the spacing at this point, you may do so by loosening the hose clamps slightly, and sliding the brackets while the transducers are installed inside them. Tighten the hose clamps when done.



***SEPARATION DISTANCE (Sensor Spacing Distance)***

Separation distance is automatically calculated by the CUTT based on parameters entered in the Setup menu. Sens Space is parameter where this distance is given, and it is located in the Setup menu. Document this value for the following transducer installation procedure.


***2 OR 4 CROSS INSTALLATION OVERVIEW – SE16B Transducers TMK-B21 or TMK-B22 Kit***

1. Prep the pipe per instructions on page 29, and mind the installation location requirements on page 32. Clean the location where the sensor is to be mounted on the opposite side of the pipe after we've marked where it will be installed. Picture below shows a very clean ductile iron pipe which did not require much cleaning. The outside paint is very well bonded and did not need to be removed:



**2 OR 4 CROSS INSTALLATION OVERVIEW - SE16B Transducers TMK-B21 or TMK-B22 Kit (Cont.)**

2. Install the spacer bar onto the right bracket as shown below:

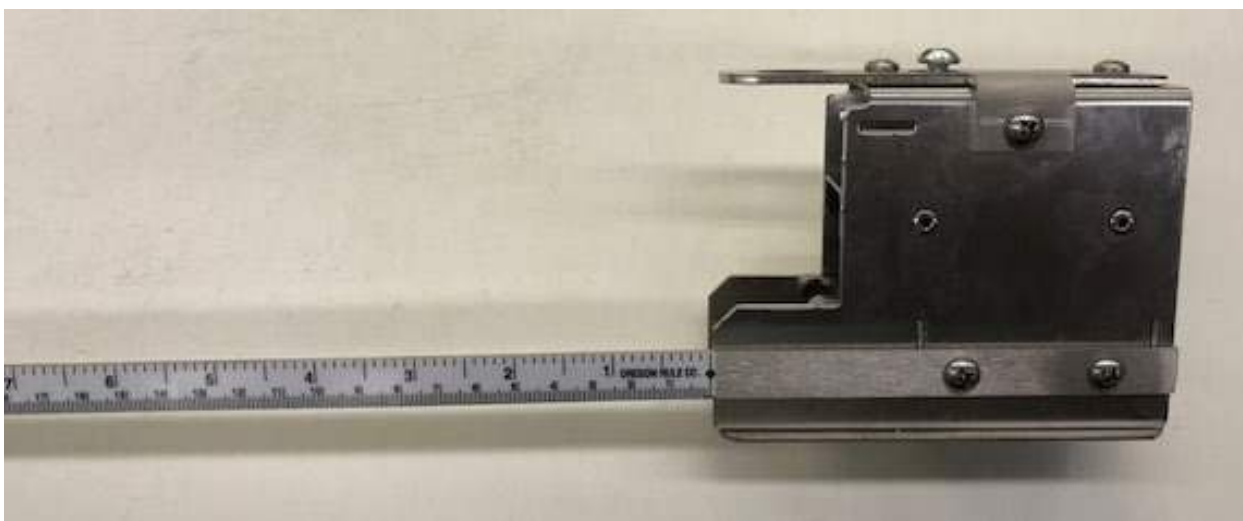

3. Insert the spacer bar into the left bracket, and position the bracket at the separation distance referenced earlier. Tighten the spacer bar clamp at this position:





**2 OR 4 CROSS INSTALLATION OVERVIEW - SE16B Transducers TMK-B21 or TMK-B22 Kit (Cont.)**

4. Place the bracket assembly on the pipe, tighten it in place with the two hose clamps:



5. Apply coupling compound to the transducers, and install them in the brackets.

Tips for installing transducers:

- a. Be sure the tightening Philips screw on the top of the bracket is loosened completely.
- b. Put the transducer into the bracket by ensuring the bottom of the transducer and the couplant does not touch the pipe as you slide it in. (Hover)
- c. Tighten the Phillips screws on the bracket until tight. The transducer will be level with the surface of the pipe, and no grease will have smeared off.

(pictures of proper coupling application and finished installation on the next page)

**2 OR 4 CROSS INSTALLATION OVERVIEW - SE16B Transducers TMK-B21 or TMK-B22 Kit (Cont.)**

Proper coupling compound application:



Finished installation, ready for cable and conduit connection:



6. If you need to make fine adjustments ( $\pm 0.25''$ ) to the spacing at this point, you may do so by loosening the hose clamps slightly, and sliding the brackets while the transducers are installed inside them. Tighten hose clamps when done.

***SEPARATION DISTANCE (Sensor Spacing Distance)***

Separation distance is automatically calculated by the CUTT based on parameters entered in the Setup menu. Sens Space is parameter where this distance is given, and it is located in the Setup menu. Document this value for the following transducer installation procedure.

***1 CROSS INSTALLATION OVERVIEW – SE16B Transducers TMK-B21 or TMK-B22 Kit***

To assist with the proper installation of the transducers in a 1 cross installation, we provide a kit with every meter, which consists of the following:

- Sanding block
- Tape measure
- Mylar sleeve
- Duct tape
- Level
- Black Sharpie


Follow along with the 1 cross installation instructions on the following pages for a description of where to use these tools.

1. Prep the pipe per instructions on page 29, and mind the installation location requirements on page 32. Clean the location where the sensor is to be mounted on the opposite side of the pipe after we've marked where it will be installed. The picture below shows a very clean ductile iron pipe which did not require much cleaning.




**1 CROSS INSTALLATION OVERVIEW – SE16B Transducers TMK-B21 or TMK-B22 Kit (Cont.)**

2. Install the spacer bar onto the right bracket as shown below:

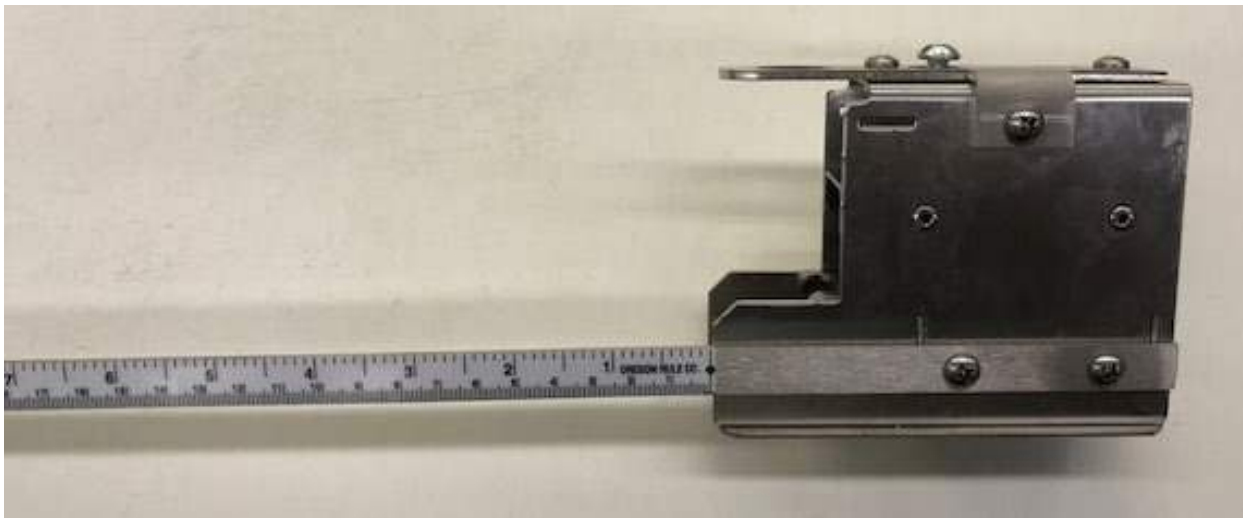

3. Insert the spacer bar into the left bracket, and position the bracket at the separation distance referenced earlier. Tighten the spacer bar clamp at this position:

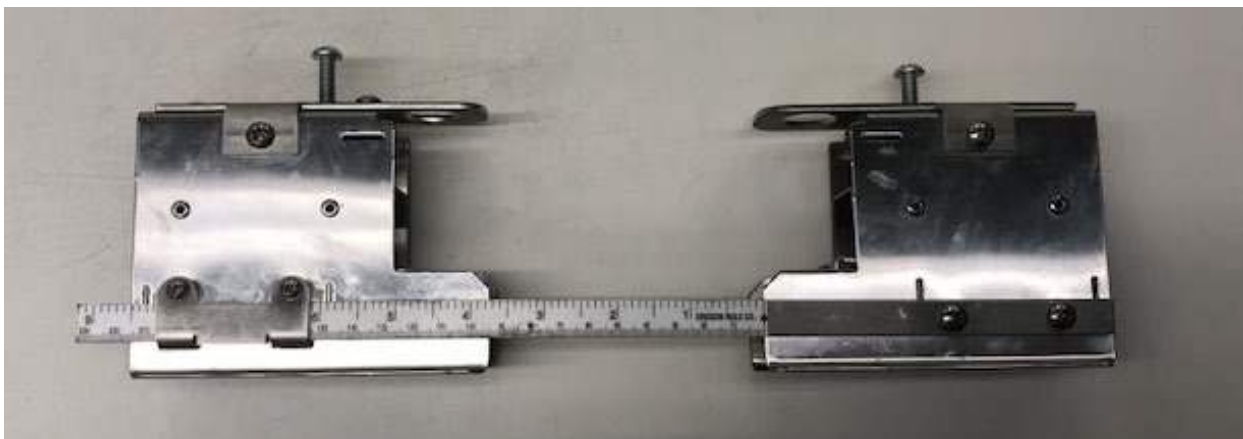



**1 CROSS INSTALLATION OVERVIEW – SE16B Transducers TMK-B21 or TMK-B22 Kit (Cont.)**

4. Place the bracket assembly on the pipe, tighten it in place with the two hose clamps. For a horizontal pipe, position the bracket at 3 or 9 o'clock. Hold the level up to the top of the bracket to ensure the angle is correct. For vertical pipes, the bracket can be at any orientation about the pipe. Tip: Use a 5/16" nut driver to tighten the hose clamp.



5. Mark the position of the center line of the bracket which is to be moved to the opposite side of the pipe. It is up to you to determine which bracket is easier to move from the current position:




**1 CROSS INSTALLATION OVERVIEW – SE16B Transducers TMK-B21 or TMK-B22 Kit (Cont.)**

6. Using the mylar sleeve included with the installation kit, wrap it around the pipe, keep it taut, and with the Sharpie, draw a line anywhere the sleeve overlaps:





7. Lay the mylar sleeve flat, and use the tape measure to measure half way between the two marks created when you wrapped the mylar around the pipe:

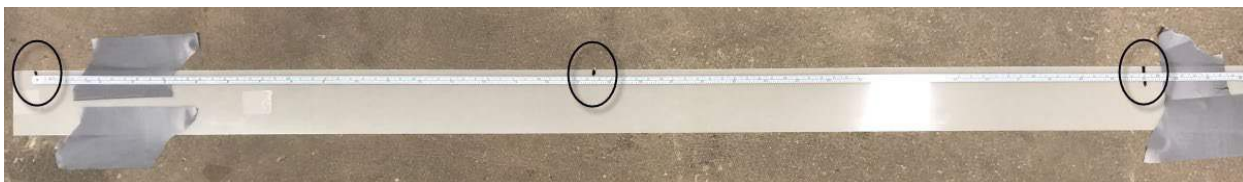

**1 CROSS INSTALLATION OVERVIEW – SE16B Transducers TMK-B21 or TMK-B22 Kit (Cont.)**

8. Position the marked mylar back on the pipe, with the overlap marks on the center line of the transducer bracket that will be rotated to the other side of the pipe. Be sure the mylar is parallel with the face of the transducer. Use duct tape to hold the mylar together and to the pipe. While the mylar is in this position, mark the opposite side of the pipe where the mylar is marked from step 7:

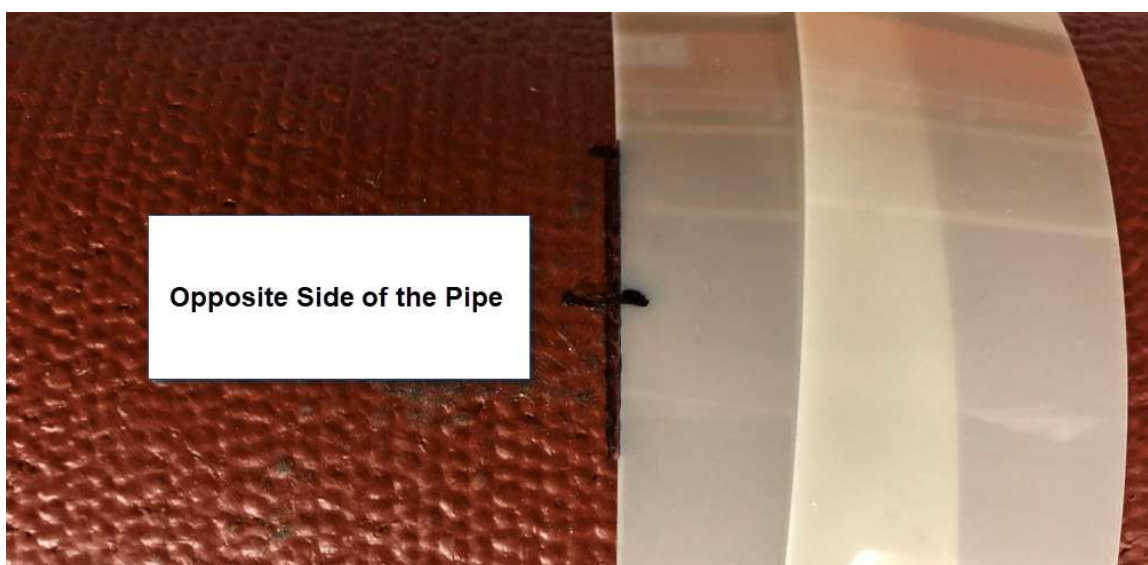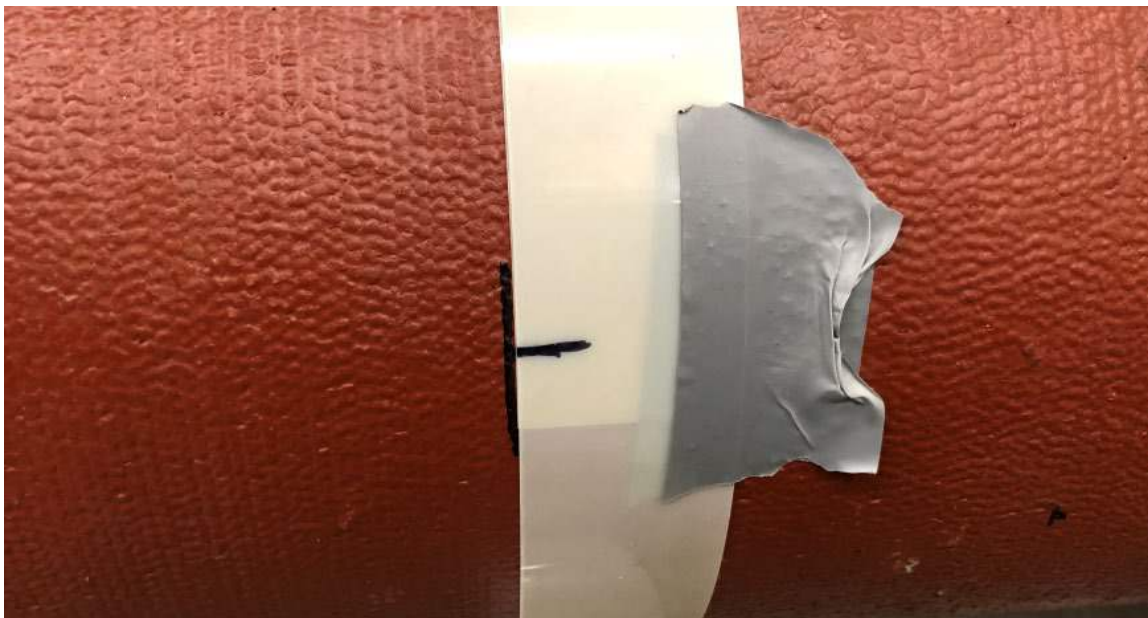




**1 CROSS INSTALLATION OVERVIEW – SE16B Transducers TMK-B21 or TMK-B22 Kit (Cont.)**

9. Sand the pipe at this position if it needs to be prepped because of scale or rust. After prepped, move the bracket to this 1 cross mark, and tighten it in place. Apply coupling compound to the transducers and place them in the brackets:

View from front of pipe:



View from back of pipe:

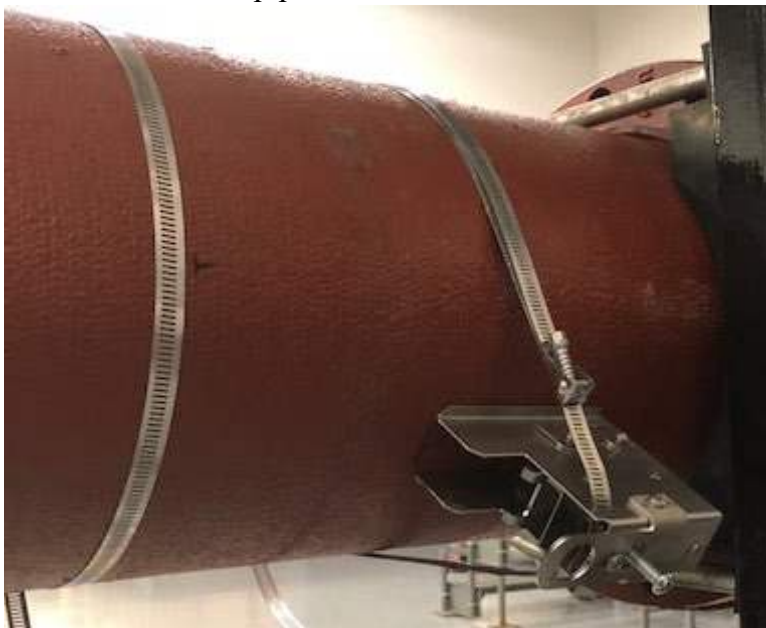

Tips for installing transducers:


- a. Be sure the tightening screws on the brackets are loosened completely.
- b. Put the transducer into the bracket by ensuring the bottom of the transducer and the couplant does not touch the pipe as you slide it in (hover).



**1 CROSS INSTALLATION OVERVIEW – SE16B Transducers TMK-B21 or TMK-B22 Kit (Cont.)**

- c. With the transducer hovering, tighten the screws on the bracket until tight. The transducer will be level with the surface of the pipe, and no grease will have smeared off from inserting the transducer in the bracket.

Proper coupling compound application:

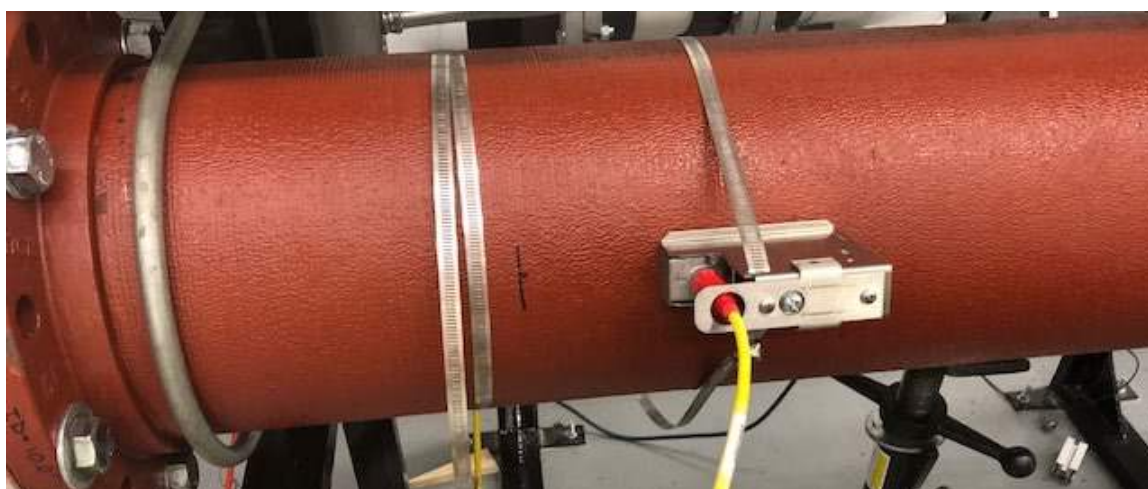

Finished installation:


10. If you need to make fine adjustments ( $\pm 0.25''$ ) to the spacing at this point, you may do so by loosening the hose clamps slightly, and sliding the brackets while the transducers are installed inside them. Tighten the hose clamps when done.

**SEPARATION DISTANCE (Sensor Spacing Distance)**

Separation distance is automatically calculated by the CUTT based on parameters entered in the Setup menu. Sens Space is parameter where this distance is given, and it is located in the Setup menu. Document this value for the following transducer installation procedure.


**2 or 4 CROSS INSTALLATION OVERVIEW – SE16A Transducers TMK-A1 Kit**

1. Prep the pipe per instructions on page 30, and mind the installation location requirements on page 32. Clean the location where the mounting track is to be installed.
2. Install the stainless steel mounting track on the pipe. Place the tightening brackets near the center, as the transducers are inserted from the outside of them.

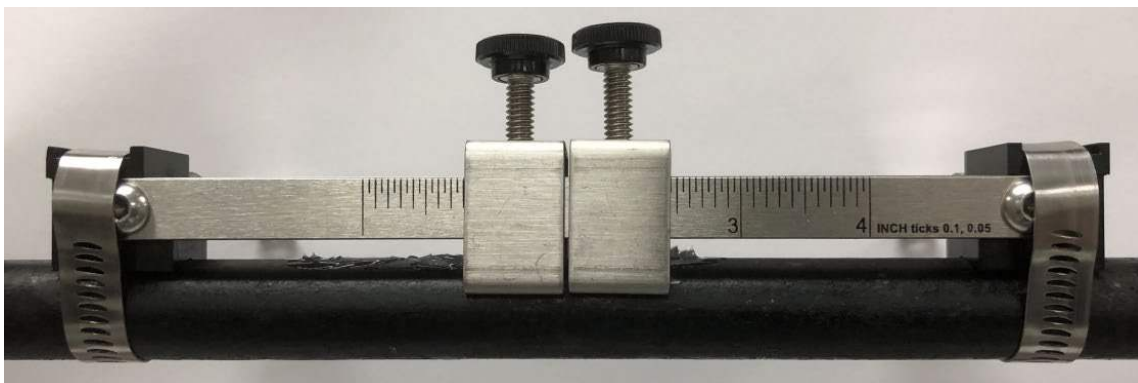


**2 or 4 CROSS INSTALLATION OVERVIEW – SE16A Transducers TMK-A1 Kit (Cont.)**

3. Apply a small amount of coupling compound on the first transducer, and place this transducer in the “reference” position. This is the position where the face of the transducer aligns with the 0 inch or 0 mm mark on the built-in ruler. Tighten this transducer down using the built-in tightening bracket. Do not over-tighten the screw.

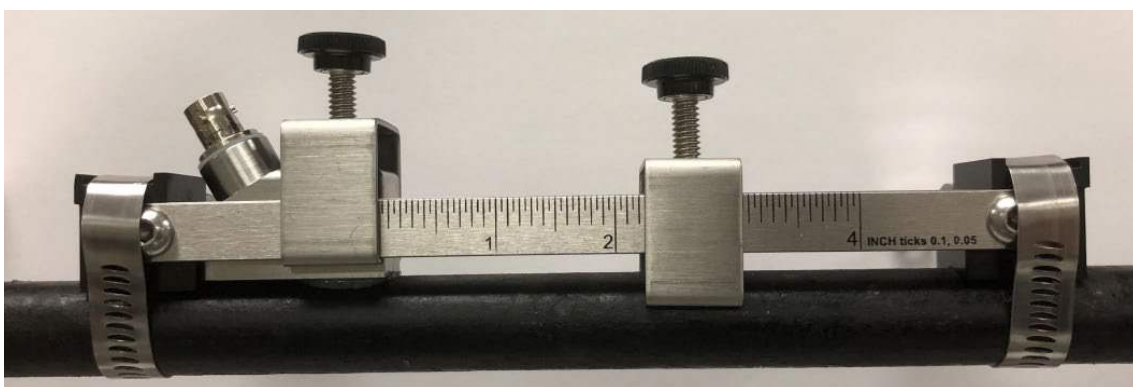

**2 or 4 CROSS INSTALLATION OVERVIEW – SE16A Transducers TMK-A1 Kit (Cont.)**

4. Apply a small amount of coupling compound on the second transducer, and place this transducer at the separation distance provided in the Setup menu of the CUTT. Tighten this transducer down using the built-in tightening bracket. Do not over-tighten the screw.

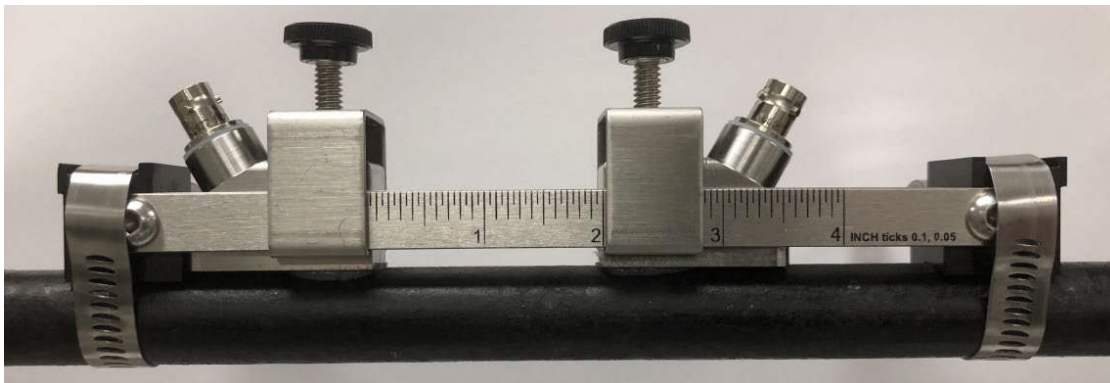


5. If you need to make fine adjustments ( $\pm 0.1$ " ) to the spacing at this point, you may do so by loosening the tightening screw slightly, sliding the second transducer, then re-tightening it.

**SENSOR MOUNTING/COUPLING RECOMMENDATIONS**

**BAD**


Avoid air traveling at the top of a horizontal pipe.

Avoid debris traveling at the bottom of a horizontal pipe.

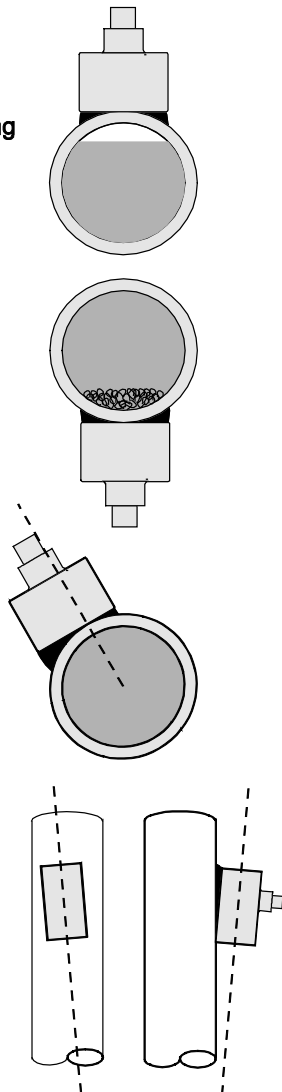

**GOOD**

Installing between 1 and 5 o'clock, and 7 and 11 o'clock on horizontal pipes is acceptable.

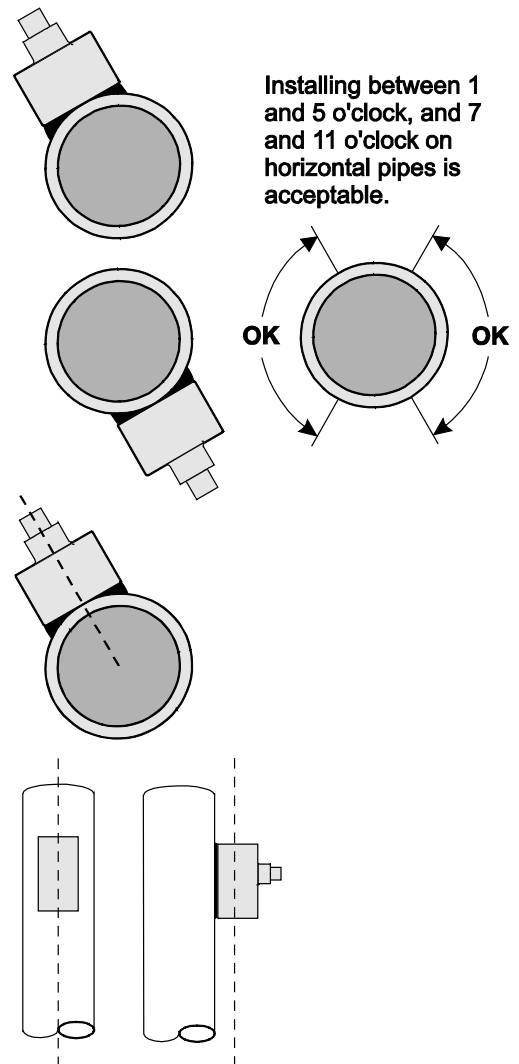



## ENCLOSURE INSTALLATION

Locate the enclosure within 25 ft (7.6 m) of the sensors (up to 100 ft - 30 m optional). The enclosure can be wall mounted with the four mounting screws (included) or panel mounted with Option PM Panel Mount kit from AW-Lake.



Avoid mounting the enclosure in direct sunlight to protect the electronics from damage due to overheating and condensate. In high humidity atmospheres, or where temperatures fall below freezing, Option TH Enclosure Heater and Thermostat is recommended. **IMPORTANT:** Seal conduit entries to prevent moisture from entering enclosure.

### NEMA4X (IP66) WITH CLEAR COVER

1. Open hinged enclosure cover.
2. Insert #12 screws (supplied) through the four enclosure mounting holes to secure the enclosure to the wall or mounting stand.

Additional conduit holes can be cut in the bottom of the enclosure when required. Use a hole saw or Greenlee-type hole cutter to cut the required holes.

**IMPORTANT:** DO NOT make conduit/wiring entries into the top or sides of the enclosure.

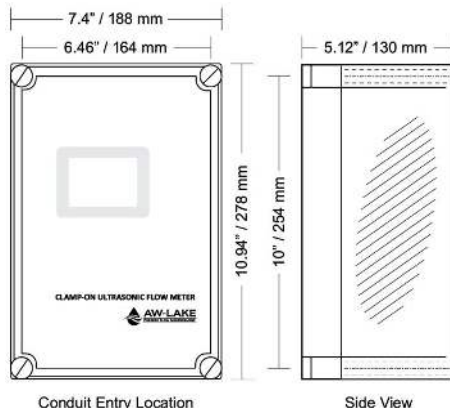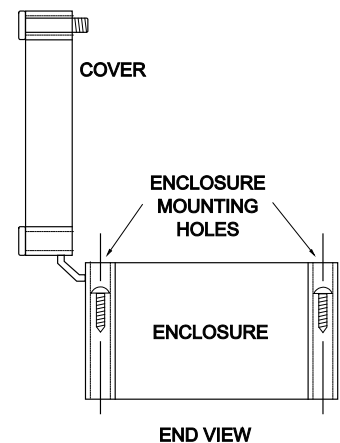

Note: This non-metallic enclosure does not automatically provide grounding between conduit connections. Grounding must be provided as part of the installation. Ground in accordance with the requirements of the National Electrical Code. System grounding is provided by connecting grounding wires from all conduit entries to the steel mounting plate or another point which provides continuity.

## CLEANING

Cleaning is not required as a part of normal maintenance.

**FIELD TROUBLESHOOTING**

<i>Possible Causes:</i>	<i>Corrective Action:</i>
<b>METER READING WHEN THERE IS NO FLOW?</b>	
Erratic measurement (set damping to 0% to check) due to electrical noise or poor signal quality.	<ul style="list-style-type: none"> <li>• Set Calibration/ Damping to 0% with zero flow use Setup / Tare function.</li> <li>• Ensure all Flowmeter wiring is in METAL conduit and sensor shield is properly connected to Ground.</li> <li>• Ensure correct power input Ground connection (&lt;1 ohm resistance).</li> <li>• Ensure 4-20mA Shield connected to Instrument Ground stud.</li> <li>• Adjust Calibration / Min Flow setting.</li> <li>• Contact AW-Lake for further assistance.</li> </ul>
Variable Speed Drive interference	<ul style="list-style-type: none"> <li>• Follow Drive manufacturers wiring and Grounding instructions</li> <li>• Relocate Flowmeter electronics, Sensor and wiring away from VSD</li> </ul>
<b>METER READING LOWER THAN EXPECTED?</b>	
Calibration Error	<ul style="list-style-type: none"> <li>• Review calibration menu. Pipe dimensions and fluid selection/fluid velocity.</li> </ul>
Lower flow rate than expected	<ul style="list-style-type: none"> <li>• Investigate pump/valves. Compare velocity with alternate instrument.</li> </ul>
Erratic measurement (set damping to 0% to check) due to electrical noise or poor signal quality.	<ul style="list-style-type: none"> <li>• Ensure all Flowmeter wiring is in METAL conduit and sensor shield is properly grounded.</li> <li>• Ensure correct power input Ground connection (&lt;1 ohm resistance).</li> <li>• Ensure 4-20mA Shield connected to Instrument Ground stud.</li> <li>• Contact AW-Lake for further assistance.</li> </ul>
<b>NO ECHO INDICATION Icon: No Echo</b>	
Improper Installation	<ul style="list-style-type: none"> <li>• Check Setup menu to ensure pipe material, size, thickness, liner type, thickness, fluid type, and fluid temperature and configured properly. Check transducer mounting method and spacing matches Setup menu values.</li> </ul>
Sensors not mounted to Pipe or mounted improperly	<ul style="list-style-type: none"> <li>• Apply coupling compound and mount sensors to pipe with proper sensor spacing.</li> </ul>

<i>Possible Causes:</i>	<i>Corrective Action:</i>
<i>NO ECHO INDICATION Icon: No Echo (cont.)</i>	
Empty pipe or partially filled	<ul style="list-style-type: none"> <li>Pipe must be fluid filled and acoustically transparent in order to obtain echoes.</li> </ul>
Coupling compound washed out, or sensor loose on pipe.	<ul style="list-style-type: none"> <li>Remount sensor</li> <li>Use Super Lube® Silicone Compound</li> </ul>
<i>SENSOR CONNECTIONS</i>	
OPEN/SHORT SENSOR ICON	<ul style="list-style-type: none"> <li>No sensors attached</li> <li>Short in transducer, or in triax transducer cable. Follow Sensor Connections steps</li> </ul>
Sensor Connections	<ul style="list-style-type: none"> <li>Check sensor connections at CUTT and at sensor junction box.</li> <li>Note: Refer to Sensor Cable Resistance Test to test final connections.</li> </ul>
<i>METER READING HIGHER THAN EXPECTED?</i>	
Calibration Error	<ul style="list-style-type: none"> <li>Review calibration menu. Pipe dimensions and fluid selection/fluid velocity.</li> </ul>
Higher flow rate than expected	<ul style="list-style-type: none"> <li>Investigate pump/valves. Compare velocity with alternate instrument.</li> </ul>
Erratic measurement (set damping to 0% to check) due to electrical noise or poor signal quality.	<ul style="list-style-type: none"> <li>Ensure all Flowmeter wiring is in METAL conduit and sensor shield is properly grounded.</li> <li>Ensure correct power input Ground connection (&lt;1 ohm resistance).</li> <li>Ensure 4-20mA Shield connected to Instrument Ground stud.</li> <li>Contact AW-Lake for further assistance.</li> </ul>
High viscosity fluid	<ul style="list-style-type: none"> <li>Laminar flow profile due to high viscosity fluid requires an adjustment to Cal Const.</li> </ul>



**SENSOR CABLE & TRANSDUCER RESISTANCE TEST**

Unplug the green sensor terminal from the Transit Time board with the sensor wires still connected and the BNC end of the cable is connected to the transducer. With a multimeter, perform resistance checks for each set of wires. One single loose terminal may cause false readings.

Test across shield and core of each wire: TDR1 and TDR2. Resistance should be around 10K ohms for any cable length. High readings indicate an open circuit and low readings indicate a short or partial short in the sensor cable connections or transducer.

Note: The CUTT will automatically detect connectivity to the sensors. Confirm that CUTT indicates “Sensor Good” in the messages menu if your resistance measured is approximately 10K Ohms.



## COMMON QUESTIONS AND ANSWERS

*The pipe vibrates. Will it affect the flow meter?*

Common vibration frequencies are far lower than the sonic frequencies used by the AW-Lake flow meter, and will not normally affect accuracy or performance. However, applications where very weak Transit Time signal is present (when sensitivity is adjusted to maximum and signal strength is low), accuracy may be affected by pipe vibration, or the flow meter may show readings under no-flow conditions. Attempt to relocate the sensor on a pipe section where vibration is reduced, or arrange pipe mounting brackets to reduce vibration at the sensor mounting location.

*The flow meter must be installed in a high noise environment. Will this affect operation?*

AW-Lake flow meters are designed to discriminate between environmental noise and the Transit Time signal. High noise environments may affect the flow meter's performance where low signal strength and/or low flow velocities are being measured. Relocate the sensor in a quieter environment if possible.

*Will pipe corrosion affect accuracy of the flow meter?*

Yes. Rust, loose paint etc. must be removed from the outside of the pipe to provide a clean mounting position when installing a Transit Time sensor. Severe corrosion/oxidation on the inside of the pipe may prevent the Transit Time signal from penetrating into the flow. If the pipe cannot be cleaned, a spool piece (PVC recommended) should be installed for sensor mounting.

*What effect do pipe liners have on the flow meter?*

The air gap between loose insertion liners and the pipe wall prevent the Transit Time signal from entering the flow. Better results can be expected with bonded liners such as cement, epoxy or tar, however an on site test is recommended to determine if the application is suitable for a Transit Time flow meter.

*Why is Transit Time recommended for clean liquids?*

The Transit Time sensor transmits sound across the flow stream in order to measure the time it takes to arrive at the other sensor, and therefore requires a fluid medium that is relatively transparent to the acoustic signal. The Transit Time system will not function when there is high volume of solids or aeration. As a guideline, AW-Lake Transit Time flow meters are recommended for clean liquids with solids or bubbles content less than 2% by volume.

*Can the sensor be submerged in water?*

Yes, for short periods of time or by accident, but it is not recommended for continuous operation. The sensor is constructed to withstand submersion to 10 psi (0.7 Bar) without damage provided the protective rubber boot is filled with Super Lube®.

*What is the purpose of the Signal Strength Display?*

The primary function of the signal strength display is to assist as a feedback when mounting sensors. Signal Strength can also be a useful diagnostics tool when troubleshooting problems with an installation. A signal strength less than 100% may indicate a problem with the installation or other issues such as a mis-programmed pipe size, pipe material, fluid type or temperature, or wrong transducer spacing. A signal strength less than 100% may also simply indicate a lot of aeration, or deteriorated pipe. Consideration should be made to use a 1 cross installation in such a case.

*Can I change the length of the sensor cable?*

Yes. The AW-Lake Transit Time design allow cable lengths up to 100 ft (30 m) or extension up to 250 ft with extra cable and JB2X optional junction box. Replacement cable of different length may be installed in rigid or flexible conduit for mechanical protection. Use only AW-Lake shielded triaxial cable.

*Does the CUTT require periodic recalibration?*

CUTT calibration does not drift over time. The solid state sensor has no moving parts to wear and affect calibration. All AW-Lake timing/counting circuits use crystal-controlled frequency references to eliminate any drift in the processing circuitry.

ISO 9000 or similar quality management systems may require periodic and verifiable recalibration of flow meters. CUTT Flow Meters may be returned to AW-Lake for factory calibration and issue of a new NIST traceable certificate. Refer to the 'Product Return Procedure' section of this manual for return instructions.

## **APPLICATIONS HOTLINE**

For applications assistance, advice or information on any AW-Lake instrument contact your Sales Representative, reach out to AW-Lake by email or phone:

United States: Tel: 414-574-4300  
Email: [sales@aw-lake.com](mailto:sales@aw-lake.com)  
Web Site: [www.aw-lake.com](http://www.aw-lake.com)

## **PRODUCT RETURN PROCEDURE**

Instruments may be returned to AW-Lake for service or warranty repair.

### **1 Obtain an RMA Number from AW-Lake -**

Before shipping a product to the factory you must have an RMA number (Returned Merchandise Authorization). Use our online form to obtain this number here: <https://aw-lake.com/return-authorization-form/> This ensures fast service and correct billing or credit.

### **2 Clean the Sensor/Product -**

***Important: unclean products will not be serviced and will be returned to the sender at their expense.***

1. Rinse sensor and cable to remove debris.
2. If the sensor has been exposed to sewage, immerse both sensor and cable in a solution of 1 part household bleach (i.e. Clorox) to 20 parts water for 5 minutes. Important: do not immerse open end of sensor cable.
3. Dry with paper towels and pack sensor and cable in a sealed plastic bag.
4. Wipe the outside of the enclosure to remove dirt or deposits.
5. Return to AW-Lake for service.

## LIMITED WARRANTY

---

AW-Lake warrants, to the original purchaser, its products to be free from defects in material and workmanship for a period of one year from date of invoice. AW-Lake will replace or repair, free of charge, any AW-Lake product if it has been proven to be defective within the warranty period. This warranty does not cover any expenses incurred in the removal and re-installation of the product.

If a product manufactured by AW-Lake should prove defective within the first year, return it freight prepaid to AW-Lake along with a copy of your invoice.

This warranty does not cover damages due to improper installation or handling, acts of nature, or unauthorized service. Modifications to or tampering with any part shall void this warranty. This warranty does not cover any equipment used in connection with the product or consequential damages due to a defect in the product.


All implied warranties are limited to the duration of this warranty. This is the complete warranty by AW-Lake and no other warranty is valid against AW-Lake. Some states do not allow limitations on how long an implied warranty lasts or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

AW-Lake

### ENCLOSURE HEATER AND THERMOSTAT - Option TH

Instruments can be factory-equipped with an Enclosure Heater and Thermostat or the module can be customer-installed. The Thermostat is factory set to turn ON at 40°F (4.5°C) and OFF at 60°F (15.5°C). Power consumption is 15 Watts.

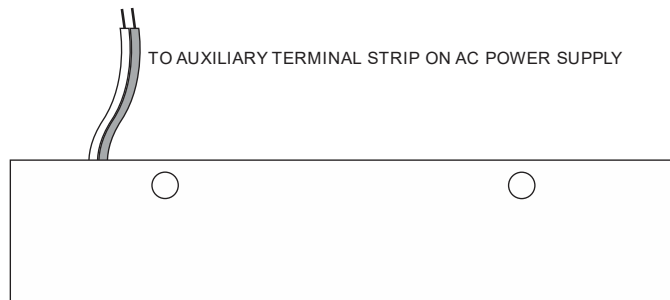

### ENCLOSURE SUNSCREEN - Option SCR


Do not mount instrument electronics in direct sunlight. Overheating will reduce the life of electronic components and condensate may form during the heat/cool cycles and cause electrical shorts.

#### Note:

Exposure to direct sunlight can cause overheating and moisture condensation which will reduce the operating life of electronics.

Protect Instruments from direct sunlight with this iridite finished aluminum sun screen (Greyline Option SCR).

Seal conduit entries with caulking compound to further reduce moisture condensation.

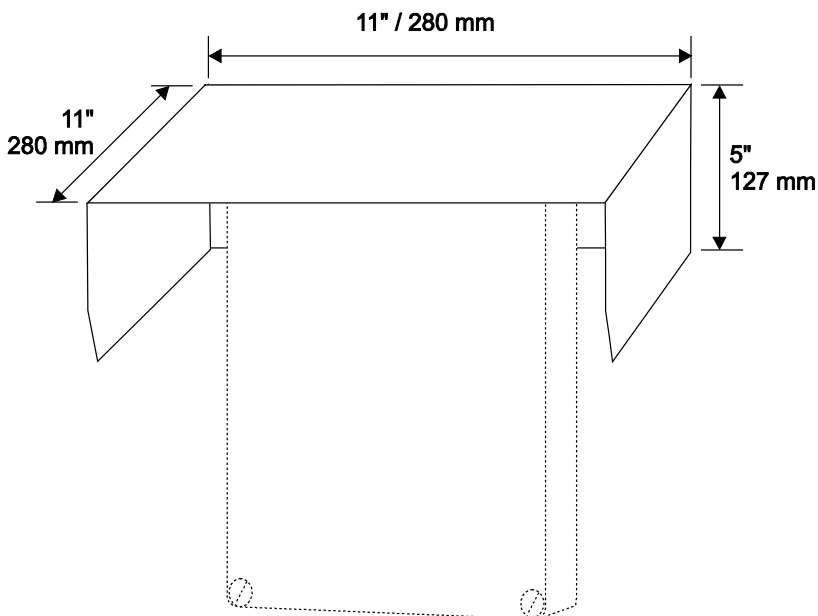


## POWER INPUT OPTION 9-32VDC

CUTT Flow Meters may be ordered factory-configured for 9-32VDC power input, or a 9-32VDC Power Input card can be installed in the place of the 100-240VAC card in the field.

### CONNECTIONS:

**POWER INPUT:** Connect 9-32VDC to the + and - terminals. The Power Input GND terminal must be connected to the nearest Ground pole. A 1-Amp fuse in line is recommended.

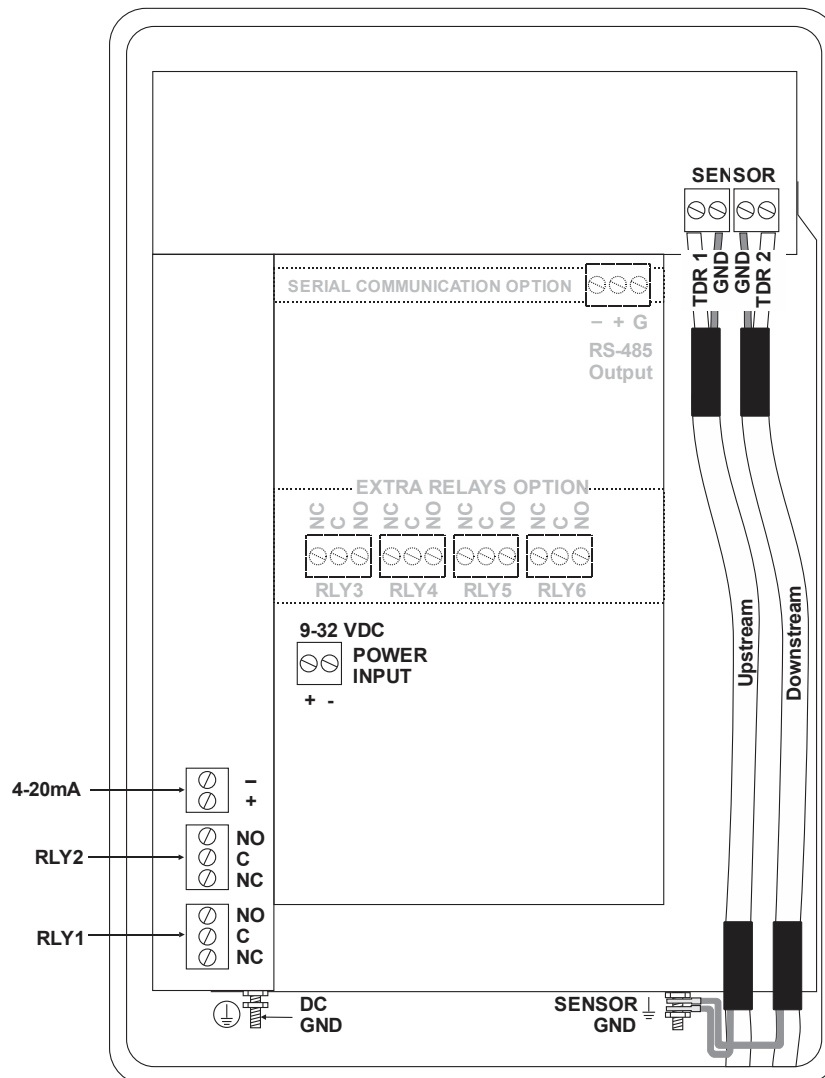


## SPECIFICATIONS

<b>Flow Rate Range:</b>	±0.07 to 40 ft/sec (±0.02 to 12 m/sec)
<b>Pipe Size:</b>	½" to 48" (15 to 1200 mm)
<b>Accuracy:</b>	±1% of flow rate from 1.5 to 40 ft/sec, ±0.015 ft/sec below 1.5 ft/sec. Repeatability and Linearity: ±0.25%
<b>Displays:</b>	White, backlit matrix - displays flow rate, totalizer, relay states, operating mode and calibration menu
<b>Calibration:</b>	built-in 5-key calibrator with English, French or Spanish language selection
<b>Power Input:</b>	100-240VAC, 50/60Hz, 10VA or Optional 9-32VDC, 10 Watts Maximum
<b>Output:</b>	Isolated 4-20mA (1000 ohm load max.). Can be changed to 0-5VDC in programming
<b>Data Logger:</b>	128MB Data Storage, 26 million data points
<b>Control Relays:</b>	Qty 2, rated 5 amp 240VAC SPDT, programmable flow alarm and/or proportional pulse
<b>Enclosure:</b>	Watertight, dust tight NEMA4X (IP 66) polycarbonate with a clear shatter-proof face
<b>Environmental Conditions:</b>	Relative humidity up to 80%, -23 to 60°C ambient temperature, maximum 5000 m altitude, pollution degree 4, Installation Category II.
<b>Electrical Surge Protection:</b>	Sensor, 4-20mA output and AC power input
<b>Approximate Shipping Weight:</b>	12 lbs (5.5 kg)

## SE16B Transit Time Sensor


<b>Pipe Diameter:</b>	2" to 48" (50 to 1200 mm)
<b>Operating Temperature:</b>	-40° to 300°F (-40° to 150°C)
<b>Exposed Materials:</b>	316SS
<b>Operating Frequency:</b>	1.28 MHz
<b>Sensor Cable:</b>	25 ft (7.6 m) Optional 50 ft (15 m) or 100 ft (30 m) available, extendable up to 500 ft (150 m) with JB2X optional junction box.
<b>Submersion Rating:</b>	Withstands accidental submersion pressure up to 10 psi (0.7 Bar) when installed with Super Lube® in sealing rubber boot.

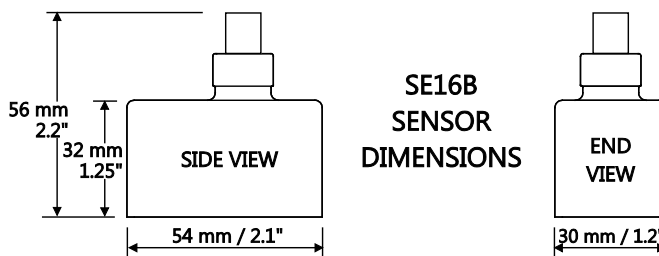



### SE16A Transit Time Sensor

<b>Pipe Diameter:</b>	0.5" To 4" (15 to 100 mm)
<b>Operating Temperature:</b>	-40° to 300°F (-40° to 150°C)
<b>Exposed Materials:</b>	316SS
<b>Operating Frequency:</b>	2.56 MHz
<b>Sensor Cable:</b>	25 ft (7.6 m) Optional 50 ft (15 m) or 100 ft (30 m) available, extendable up to 500 ft (150 m) with JB2X optional junction box.
<b>Submersion Rating:</b>	Withstands accidental submersion pressure up to 10 psi (0.7 Bar)

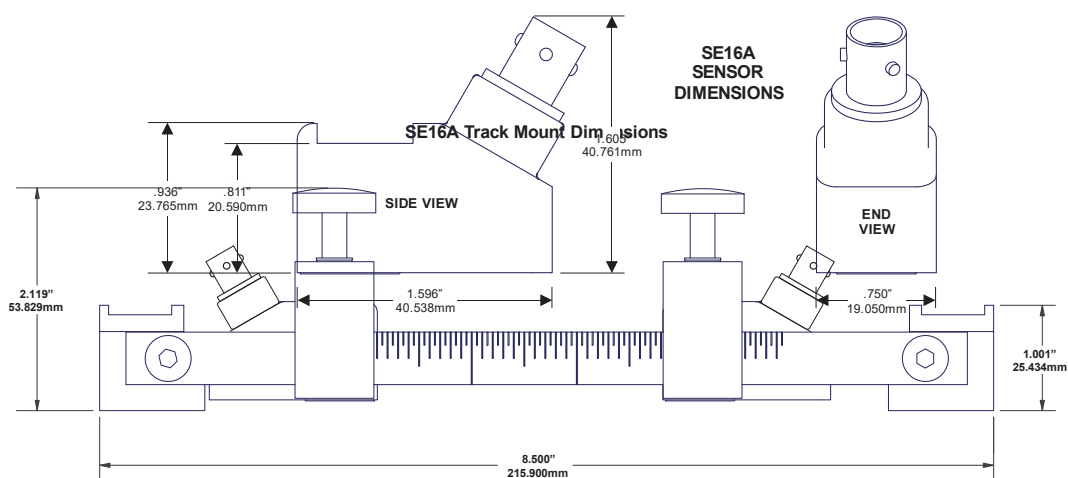

### **APPENDIX A - CONVERSION TABLE**

<b>CONVERSION GUIDE</b>		
FROM	TO	MULTIPLY BY
US GALLONS	CUBIC FEET	0.1337
US GALLONS	IMPERIAL GALS	0.8327
US GALLONS	LITRES	3.785
US GALLONS	CUBIC METERS	0.003785
LITRES/SEC	GPM	15.85
LITRES	CUBIC METERS	0.001
BARRELS (bbl)	US GALLONS	42
BARRELS (bbl)	IMPERIAL GALS	34.9726
BARRELS (bbl)	LITRES	158.9886
INCHES	MM	25.4
DEGREES F	DEGREES C	$(^{\circ}\text{F}-32) \times 0.556$
POUNDS	KILOGRAMS	0.453
PSI	BAR	0.0676
FOOT <sup>2</sup>	METER <sup>2</sup>	0.0929

Note: BARRELS (bbl) are U.S. oil barrels.

## PIPE CHARTS

Note: Not all pipe types allowed in programming have charts below. Pipe dimensions will need to be acquired from pipe markings or the pipe manufacturer in such cases.

### Carbon Steel & PVC Pipe

Pipe Size	Pipe O.D.	Schedule Standard		Extra Heavy		Dbl. Extra Heavy		Schedule 10		Schedule 20		Schedule 30		Schedule 40		Schedule 80	
		I.D.	WALL	I.D.	WALL	I.D.	WALL	I.D.	WALL	I.D.	WALL	I.D.	WALL	I.D.	WALL	I.D.	WALL
½	0.840	0.622	0.109											0.622	0.109	0.546	0.147
¾	1.050	0.824	0.113											0.824	0.113	0.742	0.154
1	1.315	1.049	0.133											1.049	0.133	0.957	0.175
1 ¼	1.660	1.380	0.140											1.380	0.140	1.278	0.191
1 ½	1.900	1.900	0.145											1.900	0.145	1.500	0.200
2	2.375	2.067	.154	1.939	.218	1.503	.436							2.067	.154	1.939	0.218
2 ½	2.875	2.469	.203	2.323	.276	1.771	.552							2.469	.203	2.323	0.276
3	3.500	3.068	.216	2.900	.300	2.300	.600							3.068	.216	2.900	0.300
3 ½	4.000	3.548	.226	3.364	.318	2.728	.636							3.548	.226	3.364	0.318
4	4.500	4.026	.237	3.826	.337	3.152	.674							4.026	.237	3.826	0.337
5	5.563	5.047	.258	4.813	.375	4.063	.750							5.047	.258	4.813	0.375
6	6.625	6.065	.280	5.761	.432	4.897	.864							6.065	.280	5.761	0.432
8	8.625	7.981	.322	7.625	.500	6.875	.875			8.125	.250	8.071	.277	7.981	.322	7.625	0.500
10	10.750	10.020	.365	9.750	.500	8.750	1.000			10.250	.250	10.136	.307	10.020	.365	9.564	0.593
12	12.750	12.000	.375	11.750	.500	10.750	1.000			12.250	.250	12.090	.330	11.938	.406	11.376	0.687
14	14.000	13.250	.375	13.000	.500			13.500	.250	13.376	.312	13.250	.375	13.124	.438	12.500	0.750
16	16.000	15.250	.375	15.000	.500			15.500	.250	15.376	.312	15.250	.375	15.000	.500	14.314	0.843
18	18.000	17.250	.375	17.000	.500			17.500	.250	17.376	.312	17.124	.438	16.876	.562	16.126	0.937
20	20.000	19.250	.375	19.000	.500			19.500	.250	19.250	.375	19.000	.500	18.814	.593	17.938	1.031
22	22.000	21.250	.375	21.000	.500			21.500	.250	21.250	.375	21.000	.500				
24	24.000	23.250	.375	23.000	.500			23.500	.250	23.250	.375	22.876	.562	22.626	.687	21.564	1.218
26	26.000	25.250	.375	25.000	.500			25.376	.312	25.000	.500						
28	28.000	27.250	.375	27.000	.500			27.376	.312	27.000	.500	26.750	.625				
30	30.000	29.250	.375	29.000	.500			29.376	.312	29.000	.500	28.750	.625				
32	32.000	31.250	.375	31.000	.500			31.376	.312	31.000	.500	30.750	.625				
34	34.000	33.250	.375	33.000	.500			33.376	.312	33.000	.500	32.750	.625				
36	36.000	35.250	.375	35.000	.500			35.376	.312	35.000	.500	34.750	.625				
42	42.000	41.250	.375	41.000	.500					41.000	.500	40.750	.625				

### Ductile Iron Pipe – Standard Classes

Size INCH	OUTSIDE DIA. INCH	Class		Class		Class		Class		Class		Class		Class		CEMENT LINING	
		WALL	I.D.	WALL	I.D.	WALL	I.D.	WALL	I.D.	WALL	I.D.	WALL	I.D.	WALL	I.D.	**STD THICKNESS	**DOUBLE THICKNESS
3	3.96			0.25	3.46	0.28	3.40	0.31	3.34	0.34	3.28	0.37	3.22	0.41	3.14	.125	.250
4	4.80			0.26	4.28	0.29	4.22	0.32	4.16	0.35	4.10	0.38	4.04	0.44	3.93		
6	6.90	0.25	6.40	0.28	6.34	0.31	6.28	0.34	6.22	0.37	6.16	0.40	6.10	0.43	6.04		
8	9.05	0.27	8.51	0.30	8.45	0.33	8.39	0.36	8.33	0.39	8.27	0.42	8.21	0.45	8.15		
10	11.10	0.39	10.32	0.32	10.46	0.35	10.40	0.38	10.34	0.41	10.28	0.44	10.22	0.47	10.16		
12	13.20	0.31	12.58	0.34	12.52	0.37	12.46	0.40	12.40	0.43	12.34	0.46	12.28	0.49	12.22		
14	15.30	0.33	14.64	0.36	14.58	0.39	14.52	0.42	14.46	0.45	14.40	0.48	14.34	0.51	14.28		
16	17.40	0.34	16.72	0.37	16.66	0.40	16.60	0.43	16.54	0.46	16.48	0.49	16.42	0.52	16.36		
18	19.50	0.35	18.80	0.38	18.74	0.41	18.68	0.44	18.62	0.47	18.56	0.50	18.50	0.53	18.44	.1875	.375
20	21.60	0.36	20.88	0.39	20.82	0.42	20.76	0.45	20.70	0.48	20.64	0.51	20.58	0.54	20.52		
24	25.80	0.38	25.04	0.41	24.98	0.44	24.92	0.47	24.86	0.50	24.80	0.53	24.74	0.56	24.68		
30	32.00	0.39	31.22	0.43	31.14	0.47	31.06	0.51	30.98	0.55	30.90	0.59	30.82	0.63	30.74		
36	38.30	0.43	37.44	0.48	37.34	0.62	37.06	0.58	37.14	0.63	37.04	0.68	36.94	0.73	36.84		
42	44.50	0.47	43.56	0.53	43.44	0.59	43.32	0.65	43.20	0.71	43.08	0.77	42.96	0.83	42.84	.250	.500
48	50.80	0.51	49.78	0.58	49.64	0.65	49.50	0.72	49.36	0.79	49.22	0.86	49.08	0.93	48.94		
54	57.10	0.57	55.96	0.65	55.80	0.73	55.64	0.81	55.48	0.89	55.32	0.97	55.16	1.05	55.00		

\*\*REDUCE I.D. BY DIMENSION SHOWN

**Stainless Steel, Hastelloy "C" & Titanium Pipe**

Pipe Size	Pipe O.D.	Schedule 5 S (a)		Schedule 10 S (a)		Schedule 40 S		Schedule 80 S	
		I.D.	WALL	I.D.	WALL	I.D.	WALL	I.D.	WALL
½	0.840	0.710	0.065	0.674	0.083	0.622	0.109	0.546	0.147
¾	1.050	0.920	0.065	0.884	0.083	0.824	0.113	0.742	0.154
1	1.315	1.185	0.065	1.097	0.109	1.049	0.133	0.957	0.175
1 ¼	1.660	1.530	0.065	1.442	0.109	1.380	0.140	1.278	0.191
1 ½	1.900	1.770	0.065	1.682	0.109	1.900	0.145	1.500	0.200
2	2.375	2.245	.065	2.157	.109	2.067	.154	1.939	.218
2 ½	2.875	2.709	.083	2.635	.120	2.469	.203	2.323	.276
3	3.500	3.334	.083	3.260	.120	3.068	.216	2.900	.300
3 ½	4.000	3.834	.083	3.760	.120	3.548	.226	3.364	.318
4	4.500	4.334	.083	4.260	.120	4.026	.237	3.826	.337
5	5.563	5.345	.109	5.295	.134	5.047	.258	4.813	.375
6	6.625	6.407	.109	6.357	.134	6.065	.280	5.761	.432
8	8.625	8.407	.109	8.329	.148	7.981	.322	7.625	.500
10	10.750	10.482	.134	10.420	.165	10.020	.365	9.750	.500
12	12.750	12.438	.156	12.390	.180	12.000	.375	11.750	.500
14	14.000	13.688	.156	13.624	.188				
16	16.000	15.670	.165	15.624	.188				
18	18.000	17.670	.165	17.624	.188				
20	20.000	19.634	.188	19.564	.218				
22	22.000	21.624	.188	21.564	.218				
24	24.000	23.563	.218	23.500	.250				

Pipe Size	Pipe O.D.	Schedule 60		Schedule 80		Schedule 100		Schedule 120		Schedule 140		Schedule 160	
		I.D.	WALL	I.D.	WALL	I.D.	WALL	I.D.	WALL	I.D.	WALL	I.D.	WALL
2	2.375			1.939	.218							1.689	.343
2 ½	2.875			2.323	.276							2.125	.375
3	3.500			2.900	.300							2.624	.438
3 ½	4.000			3.364	.318								
4	4.500			3.826	.337			3.624	.438			3.438	.531
5	5.563			4.813	.375			4.563	.500			4.313	.625
6	6.625			5.761	.432			5.501	.562			5.189	.718
8	8.625	7.813	.406	7.625	.500	7.439	.593	7.189	.718	7.001	.812	6.813	.906
10	10.750	9.750	.500	9.564	.593	9.314	.718	9.064	.843	8.750	1.000	8.500	1.125
12	12.750	11.626	.562	11.376	.687	11.064	.843	10.750	1.000	10.500	1.125	10.126	1.312
14	14.000	12.814	.593	12.500	.750	12.126	.937	11.814	1.093	11.500	1.250	11.188	1.406
16	16.000	14.688	.656	14.314	.843	13.938	1.031	13.564	1.218	13.124	1.438	12.814	1.593
18	18.000	16.500	.750	16.126	.937	15.688	1.156	15.250	1.375	14.876	1.562	14.438	1.781
20	20.000	18.376	.812	17.938	1.031	17.438	1.281	17.000	1.500	16.500	1.750	16.064	1.968
22	22.000	20.250	.875	19.750	1.125	19.250	1.375	18.750	1.625	18.250	1.875	17.750	2.125

**Cast Iron Pipe - ASA Standard**

Pipe Size	Pipe O.D.	Class 50		Class 100		Class 150		Class 200		Class 250		Class 300		Class 350	
		WALL	I.D.	WALL	I.D.	WALL	I.D.	WALL	I.D.	WALL	I.D.	WALL	I.D.	WALL	I.D.
3	3.96	0.32	3.32	0.32	3.32	0.32	3.32	0.32	3.32	0.32	3.32	0.32	3.32	0.32	3.32
4	4.80	0.35	4.10	0.35	4.10	0.35	4.10	0.35	4.10	0.35	4.10	0.35	4.10	0.35	4.10
6	6.90	0.38	6.14	0.38	6.14	0.38	6.14	0.38	6.14	0.38	6.14	0.38	6.14	0.38	6.14
8	9.05	0.41	8.23	0.41	8.23	0.41	8.23	0.41	8.23	0.41	8.23	0.41	8.23	0.41	8.23
10	11.10	0.44	10.22	0.44	10.22	0.44	10.22	0.44	10.22	0.44	10.22	0.48	10.14	0.52	10.06
12	13.20	0.48	12.24	0.48	12.24	0.48	12.24	0.48	12.24	0.52	12.16	0.52	12.16	0.56	12.08
14	15.30	0.48	14.34	0.51	14.28	0.51	14.28	0.55	14.20	0.59	14.12	0.59	14.12	0.64	14.02
16	17.40	0.54	16.32	0.54	16.32	0.54	16.32	0.58	16.24	0.63	16.14	0.68	16.04	0.68	16.04
18	19.50	0.54	18.42	0.58	18.34	0.58	18.34	0.63	18.24	0.68	18.14	0.73	18.04	0.79	17.92
20	21.60	0.57	20.46	0.62	20.36	0.62	20.36	0.67	20.26	0.72	20.16	0.78	20.04	0.84	19.92
24	25.80	0.63	24.54	0.68	24.44	0.73	24.34	0.79	24.22	0.79	24.22	0.85	24.10	0.92	23.96

**Cast Iron Pipe - AWWA Standard**

Pipe Size	Class A 100 Ft. 43 PSIG			Class B 200 Ft. 86 PSIG			Class C 300 Ft. 130 PSIG			Class D 400 Ft. 173 PSIG		
	O.D.	WALL	I.D.	O.D.	WALL	I.D.	O.D.	WALL	I.D.	O.D.	WALL	I.D.
3	3.80	0.39	3.02	3.96	0.42	3.12	3.96	0.45	3.06	3.96	0.48	3.00
4	4.80	0.42	3.96	5.00	0.45	4.10	5.00	0.48	4.04	5.00	0.52	3.96
6	6.90	0.44	6.02	7.10	0.48	6.14	7.10	0.51	6.08	7.10	0.55	6.00
8	9.05	0.46	8.13	9.05	0.51	8.03	9.30	0.56	8.18	9.30	0.60	8.10
10	11.10	0.50	10.10	11.10	0.57	9.96	11.40	0.62	10.16	11.40	0.68	10.04
12	13.20	0.54	12.12	13.20	0.62	11.96	13.50	0.68	12.14	13.50	0.75	12.00
14	15.30	0.57	14.16	15.30	0.66	13.98	15.65	0.74	14.17	15.65	0.82	14.01
16	17.40	0.60	16.20	17.40	0.70	16.00	17.80	0.80	16.20	17.80	0.89	16.02
18	19.50	0.64	18.22	19.50	0.75	18.00	19.92	0.87	18.18	19.92	0.96	18.00
20	21.60	0.67	20.26	21.60	0.80	20.00	22.06	0.92	20.22	22.06	1.03	20.00
24	25.80	0.76	24.28	25.80	0.89	24.02	26.32	1.04	24.22	26.32	1.16	24.00
30	31.74	0.88	29.98	32.00	1.03	29.94	32.40	1.20	30.00	32.74	1.37	30.00
36	37.96	0.99	35.98	38.30	1.15	36.00	38.70	1.36	39.98	39.16	1.58	36.00
42	44.20	1.10	42.00	44.50	1.28	41.94	45.10	1.54	42.02	45.58	1.78	42.02
48	50.50	1.26	47.98	50.80	1.42	47.96	51.40	1.71	47.98	51.98	1.96	48.06
54	56.66	1.35	53.96	57.10	1.55	54.00	57.80	1.90	54.00	58.40	2.23	53.94
60	62.80	1.39	60.02	63.40	1.67	60.06	64.20	2.00	60.20	64.82	2.38	60.06
72	75.34	1.62	72.10	76.00	1.95	72.10	76.88	2.39	72.10			
84	87.54	1.72	84.10	88.54	2.22	84.10						

Pipe Size	Class E 500 Ft. 217 PSIG			Class F 600 Ft. 260 PSIG			Class G 700 Ft. 304 PSIG			Class H 800 Ft. 347 PSIG		
	O.D.	WALL	I.D.	O.D.	WALL	I.D.	O.D.	WALL	I.D.	O.D.	WALL	I.D.
6	7.22	0.58	6.06	7.22	0.61	6.00	7.38	0.65	6.08	7.38	0.69	6.00
8	9.42	0.66	8.10	9.42	0.71	8.00	9.60	0.75	8.10	9.60	0.80	8.00
10	11.60	0.74	10.12	11.60	0.80	10.00	11.84	0.86	10.12	11.84	0.92	10.00
12	13.78	0.82	12.14	13.78	0.89	12.00	14.08	0.97	12.14	14.08	1.04	12.00
14	15.98	0.90	14.18	15.98	0.99	14.00	16.32	1.07	14.18	16.32	1.16	14.00
16	18.16	0.98	16.20	18.16	1.08	16.00	18.54	1.18	16.18	18.54	1.27	16.00
18	20.34	1.07	18.20	20.34	1.17	18.00	20.78	1.28	18.22	20.78	1.39	18.00
20	22.54	1.15	20.24	22.54	1.27	20.00	23.02	1.39	20.24	23.02	1.51	20.00
24	26.90	1.31	24.28	26.90	1.45	24.00	27.76	1.75	24.26	27.76	1.88	24.00
30	33.10	1.55	30.00	33.46	1.73	30.00						
36	39.60	1.80	36.00	40.04	2.02	36.00						

**Copper Tubing**

Pipe Size	K			L			M			Copper & Brass Pipe			Aluminum		
	O.D.	I.D.	WALL	O.D.	I.D.	WALL	O.D.	I.D.	WALL	O.D.	I.D.	WALL	O.D.	I.D.	WALL
½"	0.625	0.527	0.049	0.625	0.545	0.040	0.625	0.569	0.028						
¾"	0.875	0.745	0.065	0.875	0.785	0.045	0.875	0.811	0.032						
1"	1.125	0.995	0.065	1.125	1.025	0.050	1.125	1.055	0.035						
1 ¼"	1.375	1.245	0.065	1.375	1.265	0.055	1.375	1.291	0.042						
1 ½"	1.625	1.481	0.072	1.625	1.505	0.060	1.625	1.527	0.049						
2"	2.125	1.959	0.083	2.125	1.985	0.070	2.125	2.009	0.058	2.375	2.062	0.157			
2 ½"	2.625	2.435	0.095	2.625	2.465	0.080	2.625	2.495	0.065	2.875	2.500	0.188	2.500	2.400	0.050
3"	3.125	2.907	0.109	3.125	2.945	0.090	3.125	2.981	0.072	3.500	3.062	0.219	3.000	2.900	0.050
3 ½"	3.625	3.385	0.120	3.625	3.425	0.100	3.625	3.459	0.083	4.000	3.500	0.250			
4"	4.125	3.857	0.134	4.125	3.905	0.110	4.125	3.935	0.095	4.500	3.935	0.095	4.000	4.000	0.250
4 ½"													5.000	4.500	0.250
5"	5.125	4.805	0.160	5.125	4.875	0.125	5.125	4.907	0.109	5.563	5.063	0.250	5.000	4.874	0.063
6"	6.125	5.741	0.192	6.125	5.845	0.140	6.125	5.881	0.122	6.625	6.125	0.250	6.000	5.874	0.063
7"										7.625	7.062	0.282	7.000	6.844	0.078
8"	8.125	7.583	0.271	8.125	7.725	0.200	8.125	7.785	0.170	8.625	8.000	0.313	8.000	7.812	0.094
10"	10.125	9.449	0.338	10.125	9.625	0.250	10.125	9.701	0.212	10.000	9.812	0.094			
12"	12.125	11.315	0.405	12.125	11.565	0.280	12.125	11.617	0.254						

**HDPE**

Pipe Size	OD	DR 7		DR 7.3		DR 9		DR 11		DR 13.5		DR 15.5	
		Wall	ID	Wall	ID	Wall	ID	Wall	ID	Wall	ID	Wall	ID
2"	2.375"	0.339"	1.656"	0.325"	1.685"	0.264"	1.816"	0.216"	1.917"	0.176"	2.002"	0.153"	2.050"
3"	3.500"	0.500"	2.440"	0.479"	2.484"	0.389"	2.676"	0.318"	2.825"	0.259"	2.950"	0.226"	3.021"
4"	4.500"	0.643"	3.137"	0.616"	3.193"	0.500"	3.440"	0.409"	3.633"	0.333"	3.793"	0.290"	3.885"
5"	5.563"	0.795"	3.878"	0.762"	3.947"	0.618"	4.253"	0.506"	4.491"	0.412"	4.689"	0.347"	4.640"
6"	6.625"	0.946"	4.619"	0.908"	4.701"	0.736"	5.064"	0.602"	5.348"	0.491"	5.585"	0.359"	4.802"
7"	7.125"	1.018"	4.967"	0.976"	5.056"	0.792"	5.447"	0.648"	5.752"	0.528"	6.006"	0.427"	5.719"
8"	8.625"	1.232"	6.013"	1.182"	6.120"	0.958"	6.593"	0.784"	6.963"	0.639"	7.271"	0.460"	6.150"
10"	10.750"	1.536"	7.494"	1.473"	7.628"	1.194"	8.218"	0.977"	8.678"	0.796"	9.062"	0.556"	7.445"
12"	12.750"	1.821"	8.889"	1.747"	9.047"	1.417"	9.747"	1.159"	10.293"	0.944"	10.748"	0.694"	9.280"
14"	14.000"	2.000"	9.760"	1.918"	9.934"	1.556"	10.702"	1.273"	11.302"	1.037"	11.801"	0.823"	11.006"
16"	16.00"	2.286"	11.154"	2.192"	11.353"	1.778"	12.231"	1.455"	12.916"	1.185"	13.487"	0.903"	12.085"
18"	18.00"	2.571"	12.549"	2.466"	12.773"	2.000"	13.760"	1.636"	14.531"	1.333"	15.173"	1.032"	13.812"
20"	20.00"	2.857"	13.943"	2.740"	14.192"	2.222"	15.289"	1.818"	16.145"	1.481"	16.859"	1.161"	15.538"
22"	22.00"	3.143"	15.337"	3.014"	15.611"	2.444"	16.818"	2.000"	17.760"	1.630"	18.545"	1.290"	17.265"
24"	24.00"	3.429"	16.731"	3.288"	17.030"	2.667"	18.347"	2.182"	19.375"	1.778"	20.231"	1.419"	18.991"
26"	26.00"	---	---	3.562"	18.449"	2.889"	19.876"	2.364"	20.989"	1.926"	21.917"	1.548"	20.717"
28"	28.00"	---	---	---	---	3.111"	21.404"	2.545"	22.604"	2.074"	23.603"	1.677"	22.444"
30"	30.00"	---	---	---	---	3.333"	22.933"	2.727"	24.218"	2.222"	25.289"	1.806"	24.170"
32"	32.00"	---	---	---	---	3.556"	24.462"	2.909"	25.833"	2.370"	26.975"	1.935"	25.897"
34"	34.00"	---	---	---	---	---	---	3.091"	27.447"	2.519"	28.661"	2.065"	27.623"
36"	36.00"	---	---	---	---	---	---	3.273"	29.062"	2.667"	30.347"	2.194"	29.350"
42"	42.00"	---	---	---	---	---	---	---	---	3.111"	35.404"	2.323"	31.076"
48"	48.00"	---	---	---	---	---	---	---	---	3.556"	40.462"	2.710"	36.255"



**C900/C905 PVC AWWA Water Distribution Pipe (Blue)**

Pipe Size	OD	DR14		DR18		DR-21		DR25	
		Wall	ID	Wall	ID	Wall	ID	Wall	ID
4	4.80	0.343	4.114	0.267	4.266			0.192	4.416
6	6.90	0.493	5.914	0.383	6.134			0.276	6.348
8	9.05	0.646	7.758	0.503	8.044			0.362	8.326
10	11.10	0.793	9.514	0.617	9.866			0.444	10.212
12	13.20	0.943	11.314	0.733	11.734			0.528	12.144
14	15.30			0.850	13.600	0.729	13.842	0.612	14.076
16	17.40			0.967	15.466	0.829	15.742	0.696	16.008
18	19.50			1.083	17.334	0.929	17.642	0.780	17.94
20	21.60			1.200	19.200	1.029	19.542	0.864	19.872
24	25.80			1.433	22.934	1.229	23.342	1.032	23.736

**APPENDIX C – Liquid Speed of Sound**

Substance	Form Index	Specific Gravity	Sound Speed m/sec.	v/°C - m/s/°C Δ
Acetic anhydride (22)	(CH <sub>3</sub> CO) <sub>2</sub> O	1.082 (20°C)	1180	2.5
Acetic acid, anhydride (22)	(CH <sub>3</sub> CO) <sub>2</sub> O	1.082 (20°C)	1180	2.5
Acetic acid, nitrile	C <sub>2</sub> H <sub>3</sub> N	0.783	1290	4.1
Acetic acid, ethyl ester (33)	C <sub>4</sub> H <sub>8</sub> O <sub>2</sub>	0.901	1085	4.4
Acetic acid, methyl ester	C <sub>3</sub> H <sub>6</sub> O <sub>2</sub>	0.934	1211	
Acetone	C <sub>3</sub> H <sub>6</sub> O	0.791	1174	4.5
Acetonitrile	C <sub>2</sub> H <sub>3</sub> N	0.783	1290	4.1
Acetonylacetone	C <sub>6</sub> H <sub>10</sub> O <sub>2</sub>	0.729	1399	3.6
Acetylene dichloride	C <sub>2</sub> H <sub>2</sub> Cl <sub>2</sub>	1.26	1015	3.8
Acetylene tetrabromide (47)	C <sub>2</sub> H <sub>2</sub> Br <sub>4</sub>	2.966	1027	
Acetylene tetrachloride (47)	C <sub>2</sub> H <sub>2</sub> Cl <sub>4</sub>	1.595	1147	
Alcohol	C <sub>2</sub> H <sub>6</sub> O	0.789	1207	4.0
Alkazene-13	C <sub>15</sub> H <sub>24</sub>	0.86	1317	3.9
Alkazene-25	C <sub>10</sub> H <sub>12</sub> Cl <sub>2</sub>	1.20	1307	3.4
2-Amino-ethanol	C <sub>2</sub> H <sub>7</sub> NO	1.018	1724	3.4
2-Aminotolidine (46)	C <sub>7</sub> H <sub>9</sub> N	0.999 (20°C)	1618	
4-Aminotolidine (46)	C <sub>7</sub> H <sub>9</sub> N	0.966 (45°C)	1480	
Ammonia (35)	NH <sub>3</sub>	0.771	1729	6.68
Amorphous Polyolefin		0.98	962.6	
t-Amyl alcohol	C <sub>5</sub> H <sub>12</sub> O	0.81	1204	
Aminobenzene (41)	C <sub>6</sub> H <sub>5</sub> NO <sub>2</sub>	1.022	1639	4.0
Aniline (41)	C <sub>6</sub> H <sub>5</sub> NO <sub>2</sub>	1.022	1639	4.0
Argon (45)	Ar	1.400 (-188°C)	853	
Azine	C <sub>6</sub> H <sub>5</sub> N	0.982	1415	4.1
Benzene (29,40,41)	C <sub>6</sub> H <sub>6</sub>	0.879	1306	4.65
Benzol(29,40,41)	C <sub>6</sub> H <sub>6</sub>	0.879	1306	4.65
Bromine (21)	Br <sub>2</sub>	2.928	889	3.0
Bromo-benzene (46)	C <sub>6</sub> H <sub>5</sub> Br	1.522	1170	
1-Bromo-butane (46)	C <sub>4</sub> H <sub>9</sub> Br	1.276 (20°C)	1019	
Bromo-ethane (46)	C <sub>2</sub> H <sub>5</sub> Br	1.460 (20°C)	900	
Bromoform (46,47)	CHBr <sub>3</sub>	2.89 (20°C)	918	3.1
n-Butane (2)	C <sub>4</sub> H <sub>10</sub>	0.601 (0°C)	1085	5.8
2-Butanol	C <sub>4</sub> H <sub>10</sub> O	0.81	1240	3.3
sec-Butylalcohol	C <sub>4</sub> H <sub>10</sub> O	0.81	1240	3.3
n-Butyl bromide (46)	C <sub>4</sub> H <sub>9</sub> Br	1.276 (20°C)	1019	
n-Butyl chloride (22,46)	C <sub>4</sub> H <sub>9</sub> Cl	0.887	1140	4.57
tert Butyl chloride	C <sub>4</sub> H <sub>9</sub> Cl	0.84	984	4.2
Butyl oleate	C <sub>22</sub> H <sub>42</sub> O <sub>2</sub>		1404	3.0
2,3 Butylene glycol	C <sub>4</sub> H <sub>10</sub> O <sub>2</sub>	1.019	1484	1.51
Cadmium (7)	Cd		2237.7	
Carbinol (40,41)	CH <sub>4</sub> O	0.791 (20°C)	1076	2.92
Carbitol	C <sub>6</sub> H <sub>14</sub> O <sub>3</sub>	0.988	1458	
Carbon dioxide (26)	CO <sub>2</sub>	1.101 (-37°C)	839	7.71
Carbon disulphide	CS <sub>2</sub>	1.261 (22°C)	1149	

Substance	Form Index	Specific Gravity	Sound Speed m/sec.	v/°C - m/s/°C Δ
Carbon tetrachloride(33,35,47)	CCl <sub>4</sub>	1.595 (20°C)	926	2.48
Carbon tetrafluoride (14)	CF <sub>4</sub>	1.75 (-150°C)	875.2	6.61
Cetane (23)	C <sub>16</sub> H <sub>34</sub>	0.773 (20°C)	1338	3.71
Chloro-benzene	C <sub>6</sub> H <sub>5</sub> Cl	1.106	1273	3.6
1-Chloro-butane (22,46)	C <sub>4</sub> H <sub>9</sub> Cl	0.887	1140	4.57
Chloro-diFluoromethane (3) (Freon 22)	CHClF <sub>2</sub>	1.491 (-69°C)	893.9	4.79
Chloroform (47)	CHCl <sub>3</sub>	1.489	979	3.4
1-Chloro-propane (47)	C <sub>3</sub> H <sub>7</sub> Cl	0.892	1058	
Chlorotrifluoromethane (5)	CClF <sub>3</sub>		724	5.26
Cinnamaldehyde	C <sub>9</sub> H <sub>8</sub> O	1.112	1554	3.2
Cinnamic aldehyde	C <sub>9</sub> H <sub>8</sub> O	1.112	1554	3.2
Colamine	C <sub>2</sub> H <sub>7</sub> NO	1.018	1724	3.4
o-Cresol (46)	C <sub>7</sub> H <sub>8</sub> O	1.047 (20°C)	1541	
m-Cresol (46)	C <sub>7</sub> H <sub>8</sub> O	1.034 (20°C)	1500	
Cyanomethane	C <sub>2</sub> H <sub>3</sub> N	0.783	1290	4.1
Cyclohexane (15)	C <sub>6</sub> H <sub>12</sub>	0.779 (20°C)	1248	5.41
Cyclohexanol	C <sub>6</sub> H <sub>12</sub> O	0.962	1454	3.6
Cyclohexanone	C <sub>6</sub> H <sub>10</sub> O	0.948	1423	4.0
Decane (46)	C <sub>10</sub> H <sub>22</sub>	0.730	1252	
1-Decene (27)	C <sub>10</sub> H <sub>20</sub>	0.746	1235	4.0
n-Decylene (27)	C <sub>10</sub> H <sub>20</sub>	0.746	1235	4.0
Diacetyl	C <sub>4</sub> H <sub>6</sub> O <sub>2</sub>	0.99	1236	4.6
Diamylamine	C <sub>10</sub> H <sub>23</sub> N		1256	3.9
1,2 Dibromo-ethane (47)	C <sub>2</sub> H <sub>4</sub> Br <sub>2</sub>	2.18	995	
trans-1,2-Dibromoethene(47)	C <sub>2</sub> H <sub>2</sub> Br <sub>2</sub>	2.231	935	
Dibutyl phthalate	C <sub>8</sub> H <sub>22</sub> O <sub>4</sub>		1408	
Dichloro-t-butyl alcohol	C <sub>4</sub> H <sub>8</sub> Cl <sub>2</sub> O		1304	3.8
2,3 Dichlorodioxane	C <sub>2</sub> H <sub>6</sub> Cl <sub>2</sub> O <sub>2</sub>		1391	3.7
Dichlorodifluoromethane (3) (Freon 12)	CCl <sub>2</sub> F <sub>2</sub>	1.516 (-40°C)	774.1	4.24
1,2 Dichloro ethane (47)	C <sub>2</sub> H <sub>4</sub> Cl <sub>2</sub>	1.253	1193	
cis 1,2-Dichloro-Ethene(3,47)	C <sub>2</sub> H <sub>2</sub> Cl <sub>2</sub>	1.284	1061	
trans 1,2-Dichloro-ethene(3,47)	C <sub>2</sub> H <sub>2</sub> Cl <sub>2</sub>	1.257	1010	
Dichloro-fluoromethane (3) (Freon 21)	CHCl <sub>2</sub> F	1.426 (0°C)	891	3.97
1-2-Dichlorohexafluoro cyclobutane (47)	C <sub>4</sub> Cl <sub>2</sub> F <sub>6</sub>	1.654	669	
1-3-Dichloro-isobutane	C <sub>4</sub> H <sub>8</sub> Cl <sub>2</sub>	1.14	1220	3.4
Dichloro methane (3)	CH <sub>2</sub> Cl <sub>2</sub>	1.327	1070	3.94
1,1-Dichloro-1,2,2,2 tetra fluoroethane	CClF <sub>2</sub> -CClF <sub>2</sub>	1.455	665.3	3.73
Diethyl ether	C <sub>4</sub> H <sub>10</sub> O	0.713	985	4.87
Diethylene glycol, monoethyl ether	C <sub>6</sub> H <sub>14</sub> O <sub>3</sub>	0.988	1458	
Diethylenimine oxide	C <sub>4</sub> H <sub>9</sub> NO	1.00	1442	3.8
1,2-bis(DiFluoramino) butane (43)	C <sub>4</sub> H <sub>8</sub> (NF <sub>2</sub> ) <sub>2</sub>	1.216	1000	
1,2bis(DiFluoramino)- 2-methylpropane (43)	C <sub>4</sub> H <sub>9</sub> (NF <sub>2</sub> ) <sub>2</sub>	1.213	900	
1,2bis(DiFluoramino) propane (43)	C <sub>3</sub> H <sub>6</sub> (NF <sub>2</sub> ) <sub>2</sub>	1.265	960	
2,2bis(DiFluoramino) propane (43)	C <sub>3</sub> H <sub>6</sub> (NF <sub>2</sub> ) <sub>2</sub>	1.254	890	

Substance	Form Index	Specific Gravity	Sound Speed m/sec.	v/°C - m/s/°C Δ
2,2-Dihydroxydiethyl ether	C <sub>4</sub> H <sub>10</sub> O <sub>3</sub>	1.116	1586	2.4
Dihydroxyethane	C <sub>2</sub> H <sub>6</sub> O <sub>2</sub>	1.113	1658	2.1
1,3-Dimethyl-benzene (46)	C <sub>8</sub> H <sub>10</sub>	0.868 (15°C)	1343	
1,2-1.0Dimethyl-benzene(29,46)	C <sub>8</sub> H <sub>10</sub>	0.897 (20°C)	1331.5	4.1
1,4-Dimethyl-benzene (46)	C <sub>8</sub> H <sub>10</sub>		1334	
2,2-Dimethyl-butane (29,33)	C <sub>6</sub> H <sub>14</sub>	0.649 (20°C)	1079	
Dimethyl ketone	C <sub>3</sub> H <sub>6</sub> O	0.791	1174	4.5
Dimethyl pentane (47)	C <sub>7</sub> H <sub>16</sub>	0.674	1063	
Dimethyl phthalate	C <sub>8</sub> H <sub>10</sub> O <sub>4</sub>	1.2	1463	
Diiodo-methane	CH <sub>2</sub> I <sub>2</sub>	3.235	980	
Dioxane	C <sub>4</sub> H <sub>8</sub> O <sub>2</sub>	1.033	1376	
Dodecane (23)	C <sub>12</sub> H <sub>26</sub>	0.749	1279	3.85
1,2-Ethanediol	C <sub>2</sub> H <sub>6</sub> O <sub>2</sub>	1.113	1658	2.1
Ethanenitrile	C <sub>2</sub> H <sub>3</sub> N	0.783	1290	
Ethanoic anhydride (22)	(CH <sub>3</sub> CO) <sub>2</sub> O	1.082	1180	
Ethanol	C <sub>2</sub> H <sub>6</sub> O	0.789	1207	4.0
Ethanol amide	C <sub>2</sub> H <sub>7</sub> NO	1.018	1724	3.4
Ethoxyethane	C <sub>4</sub> H <sub>10</sub> O	0.713	985	4.87
Ethyl acetate (33)	C <sub>4</sub> H <sub>8</sub> O <sub>2</sub>	0.901	1085	4.4
Ethyl alcohol	C <sub>2</sub> H <sub>6</sub> O	0.789	1207	4.0
Ethyl benzene (46)	C <sub>8</sub> H <sub>10</sub>	0.867(20°C)	1338	
Ethyl bromide (46)	C <sub>2</sub> H <sub>5</sub> Br	1.461 (20°C)	900	
Ethyl iodide (46)	C <sub>2</sub> H <sub>5</sub> I	1.950 (20°C)	876	
Ether	C <sub>4</sub> H <sub>10</sub> O	0.713	985	4.87
Ethyl ether	C <sub>4</sub> H <sub>10</sub> O	0.713	985	4.87
Ethylene bromide (47)	C <sub>2</sub> H <sub>4</sub> Br <sub>2</sub>	2.18	995	
Ethylene chloride (47)	C <sub>2</sub> H <sub>4</sub> Cl <sub>2</sub>	1.253	1193	
Ethylene glycol	C <sub>2</sub> H <sub>6</sub> O <sub>2</sub>	1.113	1658	2.1
50% Glycol/ 50% H <sub>2</sub> O			1578	
d-Fenochone	C <sub>10</sub> H <sub>16</sub> O	0.947	1320	
d-2-Fenochanone	C <sub>10</sub> H <sub>16</sub> O	0.947	1320	
Fluorine	F	0.545 (-143°C)	403	11.31
Fluoro-benzene (46)	C <sub>6</sub> H <sub>5</sub> F	1.024 (20°C)	1189	
Formaldehyde, methyl ester	C <sub>2</sub> H <sub>4</sub> O <sub>2</sub>	0.974	1127	4.02
Formamide	CH <sub>3</sub> NO	1.134 (20°C)	1622	2.2
Formic acid, amide	CH <sub>3</sub> NO	1.134 (20°C)	1622	
Freon R12			774	
Furfural	C <sub>5</sub> H <sub>4</sub> O <sub>2</sub>	1.157	1444	
Furfuryl alcohol	C <sub>5</sub> H <sub>6</sub> O <sub>2</sub>	1.135	1450	3.4
Fural	C <sub>5</sub> H <sub>4</sub> O <sub>2</sub>	1.157	1444	3.7
2-Furaldehyde	C <sub>5</sub> H <sub>4</sub> O <sub>2</sub>	1.157	1444	3.7
2-Furancarboxaldehyde	C <sub>5</sub> H <sub>4</sub> O <sub>2</sub>	1.157	1444	3.7
2-Furyl-Methanol	C <sub>5</sub> H <sub>6</sub> O <sub>2</sub>	1.135	1450	3.4
Gallium	Ga	6.095	2870 (@30°C)	

Substance	Form Index	Specific Gravity	Sound Speed m/sec.	v/°C - m/s/°C Δ
Glycerin	C <sub>3</sub> H <sub>8</sub> O <sub>3</sub>	1.26	1904	2.2
Glycerol	C <sub>3</sub> H <sub>8</sub> O <sub>3</sub>	1.26	1904	2.2
Glycol	C <sub>2</sub> H <sub>6</sub> O <sub>2</sub>	1.113	1658	2.1
Helium (45)	He <sub>4</sub>	0.125(-268.8°C)	183	
Heptane (22,23)	C <sub>7</sub> H <sub>16</sub>	0.684 (20°C)	1131	4.25
n-Heptane (29,33)	C <sub>7</sub> H <sub>16</sub>	0.684 (20°C)	1180	4.0
Hexachloro-Cyclopentadiene(47)	C <sub>5</sub> Cl <sub>6</sub>	1.7180	1150	
Hexadecane (23)	C <sub>16</sub> H <sub>34</sub>	0.773 (20°C)	1338	3.71
Hexalin	C <sub>6</sub> H <sub>12</sub> O	0.962	1454	3.6
Hexane (16,22,23)	C <sub>6</sub> H <sub>14</sub>	0.659	1112	2.71
n-Hexane (29,33)	C <sub>6</sub> H <sub>14</sub>	0.649 (20°C)	1079	4.53
2,5-Hexanedione	C <sub>6</sub> H <sub>10</sub> O <sub>2</sub>	0.729	1399	3.6
n-Hexanol	C <sub>6</sub> H <sub>14</sub> O	0.819	1300	3.8
Hexahydrobenzene (15)	C <sub>6</sub> H <sub>12</sub>	0.779	1248	5.41
Hexahydrophenol	C <sub>6</sub> H <sub>12</sub> O	0.962	1454	3.6
Hexamethylene (15)	C <sub>6</sub> H <sub>12</sub>	0.779	1248	5.41
Hydrogen (45)	H <sub>2</sub>	0.071 (-256°C)	1187	
2-Hydroxy-toluene (46)	C <sub>7</sub> H <sub>8</sub> O	1.047 (20°C)	1541	
3-Hydroxy-toluene (46)	C <sub>7</sub> H <sub>8</sub> O	1.034 (20°C)	1500	
Iodo-benzene (46)	C <sub>6</sub> H <sub>5</sub> I	1.823	1114	
Iodo-ethane (46)	C <sub>2</sub> H <sub>5</sub> I	1.950 (20°C)	876	
Iodo-methane	CH <sub>3</sub> I	2.28 (20°C)	978	
Isobutyl acetate (22)	C <sub>6</sub> H <sub>12</sub> O		1180	4.85
Isobutanol	C <sub>4</sub> H <sub>10</sub> O	0.81 (20°C)	1212	
Iso-Butane			1219.8	
Isopentane (36)	C <sub>5</sub> H <sub>12</sub>	0.62 (20°C)	980	4.8
Isopropanol (46)	C <sub>3</sub> H <sub>8</sub> O	0.785 (20°C)	1170	
Isopropyl alcohol (46)	C <sub>3</sub> H <sub>8</sub> O	0.785 (20°C)	1170	
Kerosene		0.81	1324	3.6
Ketohexamethylene	C <sub>6</sub> H <sub>10</sub> O	0.948	1423	4.0
Lithium fluoride (42)	LiF		2485	1.29
Mercury (45)	Hg	13.594	1449	
Mesityloxide	C <sub>6</sub> H <sub>16</sub> O	0.85	1310	
Methane (25,28,38,39)	CH <sub>4</sub>	0.162	405(-89.15°C)	17.5
Methanol (40,41)	CH <sub>4</sub> O	0.791 (20°C)	1076	2.92
Methyl acetate	C <sub>3</sub> H <sub>6</sub> O <sub>2</sub>	0.934	1211	
o-Methylaniline (46)	C <sub>7</sub> H <sub>9</sub> N	0.999 (20°C)	1618	
4-Methylaniline (46)	C <sub>7</sub> H <sub>9</sub> N	0.966 (45°C)	1480	
Methyl alcohol (40,44)	CH <sub>4</sub> O	0.791 (20°C)	1076	2.92
Methyl benzene (16,52)	C <sub>7</sub> H <sub>8</sub>	0.867	1328	4.27
2-Methyl-butane (36)	C <sub>5</sub> H <sub>12</sub>	0.62 (20°C)	980	
Methyl carbinol	C <sub>2</sub> H <sub>6</sub> O	0.789	1207	4.0
Methyl-chloroform (47)	C <sub>2</sub> H <sub>3</sub> Cl <sub>3</sub>	1.33	985	
Methyl-cyanide	C <sub>2</sub> H <sub>3</sub> N	0.783	1290	

Substance	Form Index	Specific Gravity	Sound Speed m/sec.	v/°C - m/s/°C Δ
3-Methyl cyclohexanol	C <sub>7</sub> H <sub>14</sub> O	0.92	1400	
Methylene chloride (3)	CH <sub>2</sub> Cl <sub>2</sub>	1.327	1070	3.94
Methylene iodide	CH <sub>2</sub> I <sub>2</sub>	3.235	980	
Methyl formate (22)	C <sub>2</sub> H <sub>4</sub> O <sub>2</sub>	0.974 (20°C)	1127	4.02
Methyl iodide	CH <sub>3</sub> I	2.28 (20°C)	978	
2-Methylphenol (46)	C <sub>7</sub> H <sub>8</sub> O	1.047 (20°C)	1541	
3-Methylphenol (46)	C <sub>7</sub> H <sub>8</sub> O	1.034 (20°C)	1500	
Milk, homogenized			1548	
Morpholine	C <sub>4</sub> H <sub>9</sub> NO	1.00	1442	3.8
Naphtha		0.76	1225	
Natural Gas (37)		0.316 (-103°C)	753	
Neon (45)	Ne	1.207 (-246°C)	595	
Nitrobenzene (46)	C <sub>6</sub> H <sub>5</sub> NO <sub>2</sub>	1.204 (20°C)	1415	
Nitrogen (45)	N <sub>2</sub>	0.808 (-199°C)	962	
Nitromethane (43)	CH <sub>3</sub> NO <sub>2</sub>	1.135	1300	4.0
Nonane (23)	C <sub>9</sub> H <sub>2</sub> O	0.718 (20°C)	1207	4.04
1-Nonene (27)	C <sub>9</sub> H <sub>18</sub>	0.736 (20°C)	1207	4.0
Octane (23)	C <sub>8</sub> H <sub>18</sub>	0.703	1172	4.14
n-Octane (29)	C <sub>8</sub> H <sub>18</sub>	0.704 (20°C)	1212.5	3.50
1-Octene (27)	C <sub>8</sub> H <sub>16</sub>	0.723 (20°C)	1175.5	4.10
Oil of Camphor Sassafrassy			1390	3.8
Oil, Car (SAE 20a.30)	1.74		870	
Oil, Castor	C <sub>11</sub> H <sub>10</sub> O <sub>10</sub>	0.969	1477	3.6
Oil, Diesel		0.80	1250	
Oil, Fuel AA gravity		0.99	1485	3.7
Oil (Lubricating X200)			1530	5019.9
Oil (Olive)		0.912	1431	2.75
Oil (Peanut)		0.936	1458	
Oil (Sperm)		0.88	1440	
Oil, 6			1509	
2,2-Oxydiethanol	C <sub>4</sub> H <sub>10</sub> O <sub>3</sub>	1.116	1586	2.4
Oxygen (45)	O <sub>2</sub>	1.155 (-186°C)	952	
Pentachloro-ethane (47)	C <sub>2</sub> HCl <sub>5</sub>	1.687	1082	
Pentalin (47)	C <sub>2</sub> HCl <sub>5</sub>	1.687	1082	
Pentane (36)	C <sub>5</sub> H <sub>12</sub>	0.626 (20°C)	1020	
n-Pentane (47)	C <sub>5</sub> H <sub>12</sub>	0.557	1006	
Perchlorocyclopentadiene(47)	C <sub>5</sub> Cl <sub>6</sub>	1.718	1150	
Perchloro-ethylene (47)	C <sub>2</sub> Cl <sub>4</sub>	1.632	1036	
Perfluoro-1-Hepten (47)	C <sub>7</sub> F <sub>14</sub>	1.67	583	
Perfluoro-n-Hexane (47)	C <sub>6</sub> F <sub>14</sub>	1.672	508	
Phene (29,40,41)	C <sub>6</sub> H <sub>6</sub>	0.879	1306	4.65
β-Phenyl acrolein	C <sub>9</sub> H <sub>8</sub> O	1.112	1554	3.2
Phenylamine (41)	C <sub>6</sub> H <sub>5</sub> NO <sub>2</sub>	1.022	1639	4.0



Substance	Form Index	Specific Gravity	Sound Speed m/sec.	v/°C - m/s/°C Δ
Phenyl bromide (46)	C <sub>6</sub> H <sub>5</sub> Br	1.522	1170	
Phenyl chloride	C <sub>6</sub> H <sub>5</sub> Cl	1.106	1273	3.6
Phenyl iodide (46)	C <sub>6</sub> H <sub>5</sub> I	1.823	1114	
Phenyl methane (16,52)	C <sub>7</sub> H <sub>8</sub>	0.867 (20°C)	1328	4.27
3-Phenyl propenal	C <sub>9</sub> H <sub>8</sub> O	1.112	1554	3.2
Phthalardione	C <sub>8</sub> H <sub>4</sub> O <sub>3</sub>		1125	
Phthalic acid, anhydride	C <sub>8</sub> H <sub>4</sub> O <sub>3</sub>		1125	
Phthalic anhydride	C <sub>8</sub> H <sub>4</sub> O <sub>3</sub>		1125	
Pimelic ketone	C <sub>6</sub> H <sub>10</sub> O	0.948	1423	4.0
Plexiglas, Lucite, Acrylic			2651	
Polyterpene Resin		0.77	1099.8	
Potassium bromide (42)	Kbr		1169	0.71
Potassium fluoride (42)	KF		1792	1.03
Potassium iodide (42)	KI		985	0.64
Potassium nitrate (48)	KNO <sub>3</sub>	1.859 (352°C)	1740.1	1.1
Propane (2,13)(-45 to -130°C)	C <sub>3</sub> H <sub>8</sub>	0.585 (-45°C)	1003	5.7
1,2,3-Propanetriol	C <sub>3</sub> H <sub>8</sub> O <sub>3</sub>	1.26	1904	2.2
1-Propanol (46)	C <sub>3</sub> H <sub>8</sub> O	0.78 (20°C)	1222	
2-Propanol (46)	C <sub>3</sub> H <sub>8</sub> O	0.785 (20°C)	1170	
2-Propanone	C <sub>3</sub> H <sub>6</sub> O	0.791	1174	4.5
Propene (17,18,35)	C <sub>3</sub> H <sub>6</sub>	0.563 (-13°C)	963	6.32
n-Propyl acetate (22)	C <sub>5</sub> H <sub>10</sub> O <sub>2</sub>	1280 (2°C)	4.63	
n-Propyl alcohol	C <sub>3</sub> H <sub>8</sub> O	0.78 (20°C)	1222	
Propylchloride (47)	C <sub>3</sub> H <sub>7</sub> Cl	0.892	1058	
Propylene (17,18,35)	C <sub>3</sub> H <sub>6</sub>	0.563 (-13°C)	963	6.32
Pyridine	C <sub>6</sub> H <sub>5</sub> N	0.982	1415	4.1
Refrigerant 11 (3,4)	CCl <sub>3</sub> F	1.49	828.3	3.56
Refrigerant 12 (3)	CCl <sub>2</sub> F <sub>2</sub>	1.516 (-40°C)	774.1	4.24
Refrigerant 14 (14)	CF <sub>4</sub>	1.75 (-150°C)	875.24	6.61
Refrigerant 21 (3)	CHCl <sub>2</sub> F	1.426 (0°C)	891	3.97
Refrigerant 22 (3)	CHClF <sub>2</sub>	1.491 (-69°C)	893.9	4.79
Refrigerant 113 (3)	CCl <sub>2</sub> F-CClF <sub>2</sub>	1.563	783.7	3.44
Refrigerant 114 (3)	CClF <sub>2</sub> -CClF <sub>2</sub>	1.455	665.3	3.73
Refrigerant 115 (3)	C <sub>2</sub> ClF <sub>5</sub>		656.4	4.42
Refrigerant C318 (3)	C <sub>4</sub> F <sub>8</sub>	1.62 (-20°C)	574	3.88
Selenium (8)	Se		1072	0.68
Silicone (30 cp)		0.993	990	
Sodium fluoride (42)	NaF	0.877	2082	1.32
Sodium nitrate (48)	NaNO <sub>3</sub>	1.884 (336°C)	1763.3	0.74
Sodium nitrite (48)	NaNO <sub>2</sub>	1.805 (292°C)	1876.8	
Solvesso 3		0.877	1370	3.7
Spirit of wine	C <sub>2</sub> H <sub>6</sub> O	0.789	1207	4.0
Sulphur (7,8,10)	S		1177	-1.13
Sulphuric acid (1)	H <sub>2</sub> SO <sub>4</sub>	1.841	1257.6	1.43

Substance	Form Index	Specific Gravity	Sound Speed m/sec.	v/°C - m/s/°C Δ
Tellurium (7)	Te		991	0.73
1,1,2,2-Tetrabromo-ethane(47)	C <sub>2</sub> H <sub>2</sub> Br <sub>4</sub>	2.966120	1027	
1,1,2,2-Tetrachloro-ethane(67)	C <sub>2</sub> H <sub>2</sub> Cl <sub>4</sub>	1.595	1147	
Tetrachloroethane (46)	C <sub>2</sub> H <sub>2</sub> Cl <sub>4</sub>	1.553 (20°C)	1170	
Tetrachloro-ethene (47)	C <sub>2</sub> Cl <sub>4</sub>	1.632	1036	
Tetrachloro-methane (33,47)	CCl <sub>4</sub>	1.595 (20°C)	926	
Tetradecane (46)	C <sub>14</sub> H <sub>30</sub>	0.763 (20°C)	1331	
Tetraethylene glycol	C <sub>8</sub> H <sub>18</sub> O <sub>5</sub>	1.123	1586/5203.4	3.0
Tetrafluoro-methane (14) (Freon 14)	CF <sub>4</sub>	1.75 (-150°C)	875.24	6.61
Tetrahydro-1,4-isoxazine	C <sub>4</sub> H <sub>9</sub> NO		1442	3.8
Toluene (16,52)	C <sub>7</sub> H <sub>8</sub>	0.867 (20°C)	1328	4.27
o-Toluidine (46)	C <sub>7</sub> H <sub>9</sub> N	0.999 (20°C)	1618	
p-Toluidine (46)	C <sub>7</sub> H <sub>9</sub> N	0.966 (45°C)	1480	
Toluol	C <sub>7</sub> H <sub>8</sub>	0.866	1308	4.2
Tribromo-methane (46,47)	CHBr <sub>3</sub>	2.89 (20°C)	918	
1,1,1-Trichloro-ethane (47)	C <sub>2</sub> H <sub>3</sub> Cl <sub>3</sub>	1.33	985	
Trichloro-ethene (47)	C <sub>2</sub> HCl <sub>3</sub>	1.464	1028	
Trichloro-fluoromethane (3) (Freon 11)	CCl <sub>3</sub> F	1.49	828.3	3.56
Trichloro-methane (47)	CHCl <sub>3</sub>	1.489	979	3.4
1,1,2-Trichloro-1,2,2-Trifluoro-Ethane	CCl <sub>2</sub> F-CClF <sub>2</sub>	1.563	783.7	
Triethyl-amine (33)	C <sub>6</sub> H <sub>15</sub> N	0.726	1123	4.47
Triethylene glycol	C <sub>6</sub> H <sub>14</sub> O <sub>4</sub>	1.123	1608	3.8
1,1,1-Trifluoro-2-Chloro-2-Bromo-Ethane	C <sub>2</sub> HClBrF <sub>3</sub>	1.869	693	
1,2,2-Trifluorotrichloro- ethane (Freon 113)	CCl <sub>2</sub> F-CClF <sub>2</sub>	1.563	783.7	3.44
d-1,3,3-Trimethylnor- camphor	C <sub>10</sub> H <sub>16</sub> O	0.947	1320	
Trinitrotoluene (43)	C <sub>7</sub> H <sub>5</sub> (NO <sub>2</sub> ) <sub>3</sub>	1.64	1610	
Turpentine		0.88	1255	
Unisis 800		0.87	1346	
Water, distilled (49,50)	H <sub>2</sub> O	0.996	1498	-2.4
Water, heavy	D <sup>2</sup> O		1400	
Water, sea		1.025	1531	-2.4
Wood Alcohol (40,41)	CH <sub>4</sub> O	0.791 (20°C)	1076	2.92
Xenon (45)	Xe		630	
m-Xylene (46)	C <sub>8</sub> H <sub>10</sub>	0.868 (15°C)	1343	
o-Xylene (29,46)	C <sub>8</sub> H <sub>10</sub>	0.897 (20°C)	1331.5	4.1
p-Xylene (46)	C <sub>8</sub> H <sub>10</sub>		1334	
Xylene hexafluoride	C <sub>8</sub> H <sub>4</sub> F <sub>6</sub>	1.37	879	
Zinc (7)	Zn		3298	

**Appendix D**

Sonic Velocity Relative to Temperature of Pure Water								
Temp °F	Temp °C	Velocity ft/s	Temp °F	Temp °C	Velocity ft/s	Temp °F	Temp °C	Velocity ft/s
0.0	-17.8	4240	100.0	37.8	5003	200.0	93.3	5080
2.0	-16.7	4267	102.0	38.9	5010	202.0	94.4	5077
4.0	-15.6	4293	104.0	40.0	5016	204.0	95.6	5075
6.0	-14.4	4319	106.0	41.1	5022	206.0	96.7	5077
8.0	-13.3	4344	108.0	42.2	5028	208.0	97.8	5069
10.0	-12.2	4368	110.0	43.3	5033	210.0	98.9	5066
12.0	-11.0	4392	112.0	44.4	5038	212.0	100.0	5063
14.0	-10.0	4416	114.0	45.6	5043	214.0	101.1	5059
16.0	-8.9	4438	116.0	46.7	5048	216.0	102.2	5056
18.0	-7.8	4460	118.0	47.8	5052	218.0	103.3	5052
20.0	-6.7	4482	120.0	48.9	5057	220.0	104.4	5049
22.0	-5.6	4503	122.0	50.0	5061	222.0	105.6	5045
24.0	-4.4	4524	124.0	51.1	5065	224.0	106.7	5041
26.8	-3.3	4544	126.0	52.2	5068	226.0	107.8	5037
28.0	-2.2	4563	128.0	53.3	5072	228.0	108.9	5033
30.0	-1.1	4582	130.0	54.4	5075	230.0	110.0	5029
32.0	0.0	4601	132.0	55.6	5078	232.0	111.1	5024
34.0	1.1	4619	134.0	56.7	5081	234.0	112.2	5020
36.0	2.2	4637	136.0	57.8	5084	236.0	113.3	5015
38.0	3.3	4654	138.0	58.9	5086	238.0	114.4	5011
40.0	4.4	4671	140.0	60.0	5089	240.0	115.6	5006
42.0	5.6	4687	142.0	61.1	5091	242.0	116.7	5001
44.0	6.7	4703	144.0	62.2	5093	244.0	117.8	4996
46.0	7.8	4719	146.0	63.3	5094	246.0	118.9	4991
48.0	8.9	4734	148.0	64.4	5096	248.0	120.0	4986
50.0	10.0	4748	150.0	65.6	5097	250.0	121.1	4981
52.0	11.1	4763	152.0	66.7	5098	260.0	126.7	4944
54.0	12.2	4776	154.0	67.8	5099	270.0	132.2	4911
56.0	13.3	4790	156.0	68.9	5100	280.0	137.8	4879
58.0	14.4	4803	158.0	70.0	5101	290.0	143.3	4843
60.0	15.56	4816	160.0	71.1	5102	300.0	148.9	4806
62.0	16.7	4828	162.0	72.2	5102	310.0	154.4	4767
64.0	17.9	4840	164.0	73.3	5102	320.0	160.0	4724
66.0	18.9	4852	166.0	74.4	5102	330.0	165.6	4678
68.0	20.0	4863	168.0	75.6	5102	340.0	171.1	4633
70.0	21.1	4874	170.0	76.7	5102	350.0	176.7	4587
72.0	22.2	4885	172.0	77.8	5101	360.0	182.2	4537
74.0	23.3	4895	174.0	78.9	5101	370.0	187.8	4488
76.0	24.4	4905	176.0	80.0	5100	380.0	193.3	4439
78.0	25.6	4915	178.0	81.1	5099	390.0	198.9	4386
80.0	26.7	4925	180.0	82.2	5098	400.0	204.4	4331
82.0	27.8	4934	182.0	83.3	5097	410.0	210.0	4272
84.0	28.9	4943	184.0	84.4	5096	420.0	215.6	4209
86.0	30.0	4951	186.0	85.6	5094	430.0	221.1	4147
88.0	31.1	4959	188.0	86.7	5093	440.0	226.7	4081
90.0	32.2	4967	190.0	87.8	5091	450.0	232.2	4003
92.0	33.3	4975	192.0	88.9	5089	460.0	237.8	3937
94.0	34.4	4983	194.0	90.0	5087	470.0	243.3	3871
96.0	35.6	4990	196.0	91.1	5085	480.0	248.9	3806
98.0	36.7	4997	198.0	92.2	5082	490.0	254.4	3740

Sonic Velocity Relative to Temperature of Pure Water								
Temp °F	Temp °C	Velocity m/s	Temp °F	Temp °C	Velocity m/s	Temp °F	Temp °C	Velocity m/s
0.0	-17.8	1292.45	100.0	37.8	1525.03	200.0	93.3	1548.38
2.0	-16.7	1300.64	102.0	38.9	1526.99	202.0	94.4	1547.60
4.0	-15.6	1308.63	104.0	40.0	1528.86	204.0	95.6	1546.78
6.0	-14.4	1316.44	106.0	41.1	1530.67	206.0	96.7	1547.60
8.0	-13.3	1324.06	108.0	42.2	1532.4	208.0	97.8	1545.02
10.0	-12.2	1331.50	110.0	43.3	1534.06	210.0	98.9	1544.08
12.0	-11.0	1338.77	112.0	44.4	1535.64	212.0	100.0	1543.11
14.0	-10.0	1345.86	114.0	45.6	1537.16	214.0	101.1	1542.10
16.0	-8.9	1352.78	116.0	46.7	1538.61	216.0	102.2	1541.05
18.0	-7.8	1359.53	118.0	47.8	1539.99	218.0	103.3	1539.97
20.0	-6.7	1366.12	120.0	48.9	1541.30	220.0	104.4	1538.85
22.0	-5.6	1372.55	122.0	50.0	1542.55	222.0	105.6	1537.70
24.0	-4.4	1378.82	124.0	51.1	1543.74	224.0	106.7	1536.51
26.8	-3.3	1384.94	126.0	52.2	1544.86	226.0	107.8	1535.29
28.0	-2.2	1390.90	128.0	53.3	1545.91	228.0	108.9	1534.03
30.0	-1.1	1396.72	130.0	54.4	1546.91	230.0	110.0	1532.74
32.0	0.0	1402.39	132.0	55.6	1547.84	232.0	111.1	1531.42
34.0	1.1	1407.91	134.0	56.7	1548.72	234.0	112.2	1530.06
36.0	2.2	1413.30	136.0	57.8	1549.53	236.0	113.3	1528.67
38.0	3.3	1418.55	138.0	58.9	1550.29	238.0	114.4	1527.26
40.0	4.4	1423.66	140.0	60.0	1550.99	240.0	115.6	1525.81
42.0	5.6	1428.64	142.0	61.1	1551.63	242.0	116.7	1524.33
44.0	6.7	1433.48	144.0	62.2	1552.21	244.0	117.8	1522.83
46.0	7.8	1438.20	146.0	63.3	1552.74	246.0	118.9	1521.29
48.0	8.9	1442.80	148.0	64.4	1553.22	248.0	120.0	1519.73
50.0	10.0	1447.27	150.0	65.6	1553.64	250.0	121.1	1518.14
52.0	11.1	1451.62	152.0	66.7	1554.01	260.0	126.7	1507.00
54.0	12.2	1455.85	154.0	67.8	1554.32	270.0	132.2	1497.00
56.0	13.3	1459.97	156.0	68.9	1554.59	280.0	137.8	1487.00
58.0	14.4	1463.97	158.0	70.0	1554.80	290.0	143.3	1476.00
60.0	15.56	1467.86	160.0	71.1	1554.98	300.0	148.9	1465.00
62.0	16.7	1471.64	162.0	72.2	1555.07	310.0	154.4	1453.00
64.0	17.9	1475.31	164.0	73.3	1555.13	320.0	160.0	1440.00
66.0	18.9	1478.88	166.0	74.4	1555.15	330.0	165.6	1426.00
68.0	20.0	1482.34	168.0	75.6	1555.11	340.0	171.1	1412.00
70.0	21.1	1485.70	170.0	76.7	1555.03	350.0	176.7	1398.00
72.0	22.2	1488.96	172.0	77.8	1554.90	360.0	182.2	1383.00
74.0	23.3	1492.13	174.0	78.9	1554.72	370.0	187.8	1368.00
76.0	24.4	1495.19	176.0	80.0	1554.49	380.0	193.3	1353.00
78.0	25.6	1498.16	178.0	81.1	1554.22	390.0	198.9	1337.00
80.0	26.7	1501.04	180.0	82.2	1553.91	400.0	204.4	1320.00
82.0	27.8	1503.82	182.0	83.3	1553.55	410.0	210.0	1302.00
84.0	28.9	1506.52	184.0	84.4	1553.14	420.0	215.6	1283.00
86.0	30.0	1509.13	186.0	85.6	1552.70	430.0	221.1	1264.00
88.0	31.1	1511.65	188.0	86.7	1552.21	440.0	226.7	1244.00
90.0	32.2	1514.08	190.0	87.8	1551.67	450.0	232.2	1220.00
92.0	33.3	1516.44	192.0	88.9	1551.10	460.0	237.8	1200.00
94.0	34.4	1518.70	194.0	90.0	1550.48	470.0	243.3	1180.00
96.0	35.6	1520.89	196.0	91.1	1549.82	480.0	248.9	1160.00
98.0	36.7	1523.00	198.0	92.2	1549.12	490.0	254.4	1140.00